

# Keysight 1000A Series Oscilloscopes

User's Guide

# Notices

© Keysight Technologies, Inc. 2008-2009, 2017

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

## Manual Part Number

54130-97016

## Edition

Third Edition, August 2017

Printed in Malaysia

Keysight Technologies, Inc.  
1900 Garden of the Gods Road  
Colorado Springs, CO 80907 USA

## Warranty

The material contained in this document is provided "as is," and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Keysight disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Keysight shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Keysight and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at [www.keysight.com/find/sweula](http://www.keysight.com/find/sweula). The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or

otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

## Safety Notices

### CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

### WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

See also **Appendix A**, "Safety Notices," starting on page 147.

# Keysight 1000A Series Oscilloscopes—At a Glance

The Keysight 1000A Series oscilloscopes are low-cost portable digital storage oscilloscopes (DSOs) that deliver these powerful features:

- Two and four-channel, 60 MHz, 100 MHz, and 200 MHz bandwidth models.
- Bright 5.7 inch QVGA (320 x 240) TFT color LCD display and small footprint (to save bench space).
- Up to 2 GSa/s sample rate.
- Up to 20 kpts memory.
- Up to 400 wfms/s refresh rate.
- Automatic voltage and time measurements (22) and cursor measurements.
- Powerful triggering (edge, pulse width, video, pattern, and alternate modes) with adjustable sensitivity (to filter noise and avoid false triggers).
- Math function waveforms: add, subtract, multiply, FFT.
- USB ports (2 host, 1 device) for easy printing, saving, and sharing of waveforms, setups, screen BMP files, and CSV data files.
- Internal storage for 10 waveforms and 10 setups.
- Special digital filter and waveform recorder.
- Built-in 6-digit hardware frequency counter.
- Multi-language (11) user interface menus and built-in help.

**Table 1** Keysight 1000A Series Oscilloscope Models

Channels	Input Band width (Maximum Sample Rate, Memory)		
	200 MHz (1-2 GSa/s, 10-20 kpts)	100 MHz (1-2 GSa/s, 10-20 kpts)	60 MHz (1-2 GSa/s, 10-20 kpts)
4 channel	DS01024A	DS01014A	DS01004A
2 channel	DS01022A	DS01012A	DS01002A

# In This Book

This guide shows how to use the Keysight 1000A Series oscilloscopes.

## **1 Getting Started**

Describes the basic steps to take when first using the oscilloscope.

## **2 Displaying Data**

Describes how to use the horizontal and vertical controls, channel settings, math waveforms, reference waveforms, and display settings.

## **3 Capturing Data**

Describes acquisition modes and how to set up triggers.

## **4 Making Measurements**

Describes voltage, time, and cursor measurements.

## **5 Saving, Recalling, and Printing Data**

Describes how to save, recall, and print data.

## **6 Oscilloscope Utility Settings**

Describes other oscilloscope settings found in the Utility menu.

## **7 Specifications and Characteristics**

Describes the 1000A Series oscilloscopes' specifications and characteristics.

# Contents

Keysight 1000A Series Oscilloscopes—At a Glance / 3

In This Book / 4

Figures / 13

Tables / 15

## 1 Getting Started

Step 1. Inspect the package contents / 18

Step 2. Turn on the oscilloscope / 19

Step 3. Load the default oscilloscope setup / 20

Step 4. Input a waveform / 21



/ 21

Step 5. Use Auto-Scale / 22

Step 6. Compensate probes / 24

Low Frequency Compensation / 24

Step 7. Become familiar with the Front Panel Controls / 25

Front Panel Overlays for Different Languages / 26

Using the Oscilloscope Softkey Menus / 27

Step 8. Become familiar with the oscilloscope display / 29

Step 9. Use the Run Control keys / 30

Step 10. Access the built-in help / 31

Securing the Oscilloscope / 32

## 2 Displaying Data

### Using the Horizontal Controls / 34

To adjust the horizontal scale / 35

To adjust the horizontal position / 36

To display the zoomed time base / 37

To change the horizontal time base (Y-T, X-Y, or Roll) / 38

To view the sample rate / 40

### Using the Vertical Controls / 41

To turn waveforms on or off (channel, math, or reference) / 41

To adjust the vertical scale / 41

To adjust the vertical position / 42

To specify channel coupling / 43

To specify a band width limit / 44

To specify the probe attenuation / 46

To use a digital filter / 46

To change the Volts/Div control sensitivity / 47

To invert a waveform / 47

To specify the channel units / 49

### Using Math Function Waveforms / 50

To add, subtract, or multiply waveforms / 50

To display the frequency domain using FFT / 51

### Using Reference Waveforms / 54

To save a reference waveform / 54

To export or import reference waveforms / 54

To return the reference waveform to its default scale / 55

### Changing the Display Settings / 56

To display waveforms as vectors or dots / 56

To clear the display / 56

To set waveform persistence / 57

To adjust waveform intensity / 57

To display graded waveform intensity / 58

- To change the grid / 58
- To change the menu display time / 58
- To adjust the grid brightness / 59
- To invert screen colors / 59
- To select screen persistence / 60

### 3 Capturing Data

- Overview of Sampling / 62
  - Sampling Theory / 62
  - Aliasing / 62
  - Oscilloscope Bandwidth and Sample Rate / 63
  - Oscilloscope Rise Time / 65
  - Oscilloscope Bandwidth Required / 66
  - Real-Time Sampling / 67
  - Memory Depth and Sample Rate / 68
- Choosing the Acquisition Mode / 69
  - To select the Normal acquisition mode / 69
  - To select the Average acquisition mode / 69
  - To select the Peak Detect acquisition mode / 71
  - To turn OFF/ON sine(x)/x interpolation / 73
- Recording/Playing-back Waveforms / 74
  - To record waveforms / 74
  - To play-back waveforms / 75
  - To store recorded waveforms / 76
- Adjusting the Trigger Level / 78
  - To adjust the trigger level / 78
  - To force a trigger / 78
- Choosing the Trigger Mode / 80
  - To set up edge triggers / 80
  - To set up pulse width triggers / 81
  - To set up video triggers / 82

To set up pattern triggers	/ 84
To set up alternate triggers	/ 85
Setting Other Trigger Parameters	/ 87
To set the trigger sweep	/ 87
To set the trigger coupling	/ 87
To set the trigger high-frequency reject coupling	/ 88
To change the trigger sensitivity	/ 89
To specify a trigger holdoff	/ 90
Using the External Trigger Input	/ 91

## 4 Making Measurements

Displaying Automatic Measurements	/ 94
To display an automatic measurement	/ 94
To clear automatic measurements from the display	/ 95
To display or hide all automatic measurements	/ 95
To select channels for delay/phase measurements	/ 95
Voltage Measurements	/ 96
Vmax (Maximum Voltage)	/ 96
Vmin (Minimum Voltage)	/ 97
Vpp (Peak-to-Peak Voltage)	/ 97
Vtop (Top Voltage)	/ 97
Vbase (Base Voltage)	/ 97
Vamp (Amplitude Voltage = Vtop - Vbase)	/ 97
Vavg (Average Voltage)	/ 97
Vrms (Root-Mean-Square Voltage)	/ 97
Overshoot	/ 98
Preshoot	/ 98
Time Measurements	/ 99
Period	/ 99
Frequency	/ 100
Rise Time	/ 100



Fall Time	/ 100
Positive Pulse Width	/ 101
Negative Pulse Width	/ 101
Positive Duty Cycle	/ 101
Negative Duty Cycle	/ 101
Delay Between Rising Edges	/ 102
Delay Between Falling Edges	/ 102
Phase Between Rising Edges	/ 103
Phase Between Falling Edges	/ 103
Counter (Frequency)	/ 104
Making Cursor Measurements	/ 105
To use manually adjustable cursors	/ 105
To use tracking cross-hair cursors	/ 106
To display cursors for automatic measurements	/ 107

## 5 Saving, Recalling, and Printing Data

Saving and Recalling Data	/ 110
To save and recall waveforms	/ 110
To save and recall oscilloscope setups	/ 111
To save screens to BMP or PNG format files	/ 112
To save data to CSV format files	/ 113
Using the Disk Manager	/ 114
To switch between files, path, and directory panes	/ 115
To navigate the directory hierarchy	/ 115
To create new folders	/ 115
To edit folder/file names	/ 116
To delete folders	/ 117
To rename folders	/ 117
To delete files	/ 117
To recall files	/ 117
To rename files	/ 118
To display disk information	/ 118

Printing Screens / 119

To choose a PictBridge printer / 120

To print with inverted screen colors / 121

To choose color or grayscale printing / 121

To copy a screen to the printer / 121

## 6 Oscilloscope Utility Settings

Displaying System Information / 124

Turning Sound ON or OFF / 124

Setting and Displaying the Date and Time / 124

Setting the Language (Menu and Help) / 125

Performing Mask Tests / 126

To enable/disable mask tests / 126

To select the source channel for mask tests / 126

To run/stop a mask test / 127

To turn on/off the mask test message display / 127

To set the mask test output condition / 127

To stop a mask test on the output condition / 128

To set up masks / 128

Setting Preferences / 131

To set up the screen saver / 131

To select the vertical scale reference level / 131

To select the USB device port function / 131

Running Self-Calibration / 132

## 7 Specifications and Characteristics

Environmental Conditions / 136

Overvoltage Category / 136

Pollution Degree / 136

Pollution Degree Definitions / 136

Measurement Category / 137

Measurement Category Definitions / 137

Maximum Input Voltages / 137



/ 137



/ 137

Specifications / 138

Characteristics / 139

## A Safety Notices

Warnings / 147

Safety Symbols / 148

## Index



# Figures

- Figure 1. Power Switch / 19
- Figure 2. [Default Setup] Key / 20
- Figure 3. [Auto-Scale] Key / 22
- Figure 4. Low Frequency Probe Compensation / 24
- Figure 5. Front Panel / 25
- Figure 6. Softkey Menus / 27
- Figure 7. Oscilloscope Display / 29
- Figure 8. Run Control Keys / 30
- Figure 9. [Help] Key / 31
- Figure 10. Securing the Instrument / 32
- Figure 11. Horizontal Controls / 34
- Figure 12. Status Bar, Trigger Position, and Horizontal Scale Control Indicators / 35
- Figure 13. Zoomed Time Base Window / 37
- Figure 14. X-Y Display Format Showing Out-of-Phase Waveforms / 39
- Figure 15. Vertical Controls / 41
- Figure 16. DC Coupling Control / 43
- Figure 17. AC Coupling Control / 44
- Figure 18. BW Limit Control OFF / 45
- Figure 19. BW Limit Control ON / 45
- Figure 20. Waveform Before Inversion / 48
- Figure 21. Waveform After Inversion / 49
- Figure 22. Math Scale Setting Value / 50
- Figure 23. FFT Waveform / 53
- Figure 24. [Display] Key / 56
- Figure 25. Aliasing / 63
- Figure 26. Theoretical Brick-Wall Frequency Response / 64
- Figure 27. Sample Rate and Oscilloscope Bandwidth / 65

Figure 28. Real-Time Sampling Mode	/ 67
Figure 29. Acquire Key	/ 69
Figure 30. Noisy Waveform Without Averaging	/ 70
Figure 31. Noisy Waveform With Averaging	/ 70
Figure 32. Peak Detect Waveform	/ 72
Figure 33. Trigger Controls	/ 78
Figure 34. Line Synchronization	/ 83
Figure 35. Field Synchronization	/ 84
Figure 36. Alternate Triggers	/ 86
Figure 37. Trigger Holdoff	/ 90
Figure 38. [Measure] Key	/ 94
Figure 39. Voltage Measurement Points	/ 96
Figure 40. Period and Frequency Measurements	/ 99
Figure 41. Rise Time and Fall Time Measurements	/ 100
Figure 42. Positive Pulse Width and Negative Pulse Width Measurements	/ 101
Figure 43. Delay Measurements	/ 102
Figure 44. Phase Measurements	/ 103
Figure 45. [Cursors] Key	/ 105
Figure 46. USB Host Port on Front Panel	/ 109
Figure 47. [Save/Recall] Key	/ 110
Figure 48. Disk Manager	/ 114
Figure 49. Editing Folder/File Names in Disk Manager	/ 116
Figure 50. USB Ports on Back Panel	/ 119
Figure 51. [Print] Key Location	/ 120
Figure 52. [Utility] Key	/ 123
Figure 53. Mask Test Display	/ 127
Figure 54. Mask Test Mask Setting	/ 129
Figure 55. Calibration Screen	/ 133

## Tables

Table 1. Keysight 1000A Series Oscilloscope Models	/ 3
Table 2. Auto-Scale Default Settings	/ 23
Table 3. Front Panel Controls	/ 26
Table 4. FFT Window Characteristics	/ 52
Table 5. Specifications	/ 138
Table 6. Acquisition System Characteristics	/ 139
Table 7. Vertical System Characteristics	/ 139
Table 8. Horizontal System Characteristics	/ 141
Table 9. Trigger System Characteristics	/ 142
Table 10. Display System Characteristics	/ 142
Table 11. Measurement Features	/ 143
Table 12. FFT Measurement Features	/ 143
Table 13. Storage	/ 144
Table 14. I/O	/ 144
Table 15. General Characteristics	/ 145
Table 16. Power Requirements	/ 145
Table 17. Environmental Characteristics	/ 146
Table 18. Other	/ 146





# 1 Getting Started

Step 1. Inspect the package contents /	18
Step 2. Turn on the oscilloscope /	19
Step 3. Load the default oscilloscope setup /	20
Step 4. Input a waveform /	21
Step 5. Use Auto-Scale /	22
Step 6. Compensate probes /	24
Step 7. Become familiar with the Front Panel Controls /	25
Step 8. Become familiar with the oscilloscope display /	29
Step 9. Use the Run Control keys /	30
Step 10. Access the built-in help /	31
Securing the Oscilloscope /	32

This chapter describes the basic steps to take when first using the oscilloscope.

## Step 1. Inspect the package contents

**1** Inspect the shipping container for damage.

Keep a damaged shipping container or cushioning material until you have inspected the contents of the shipment for completeness and have checked the oscilloscope mechanically and electrically.

**2** Verify that you received the following items in the oscilloscope packaging:

- Oscilloscope.
- Power cord.
- N2841A 10:1 10 M $\Omega$  passive probes (60 MHz and 100 MHz models), quantity = number of oscilloscope channels.
- N2842A 10:1 10 M $\Omega$  passive probes (200 MHz model), quantity = number of oscilloscope channels.
- User's guide (this manual).
- Additional documentation and software CD.
- Front panel overlay (if language option other than English is chosen).

If anything is missing, or if you need to order additional probes, power cords, etc., contact your nearest Keysight Technologies sales office.

**3** Inspect the oscilloscope.

- If there is mechanical damage or a defect, or if the oscilloscope does not operate properly or does not pass performance tests, notify your Keysight Technologies sales office.
- If the shipping container is damaged, or the cushioning materials show signs of stress, notify the carrier; then, contact your nearest Keysight Technologies sales office.

Keep the shipping materials for the carrier's inspection.

The Keysight Technologies sales office will arrange for repair or replacement at Keysight's option without waiting for claim settlement.

## Step 2. Turn on the oscilloscope

The next few steps (turning on the oscilloscope, loading the default setup, and inputting a waveform) will provide a quick functional check to verify the oscilloscope is operating correctly.

- 1 Connect the power cord to a power source.


Use only power cords designed for your oscilloscope.

Use a power source that delivers the required power (see [Table 16](#) on page 145).

### WARNING

**To avoid electric shock, be sure the oscilloscope is properly grounded.**

- 2 Turn on the oscilloscope.

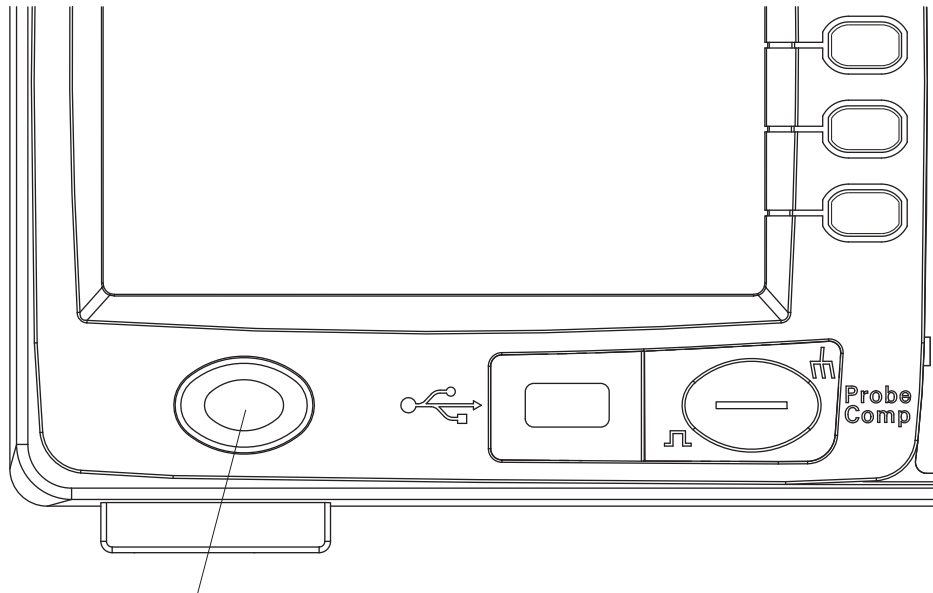


**Figure 1** Power Switch

## Step 3. Load the default oscilloscope setup

You can recall the factory default setup any time you want to return the oscilloscope to its original setup.

- 1 Press the front panel **[Default Setup]** key.

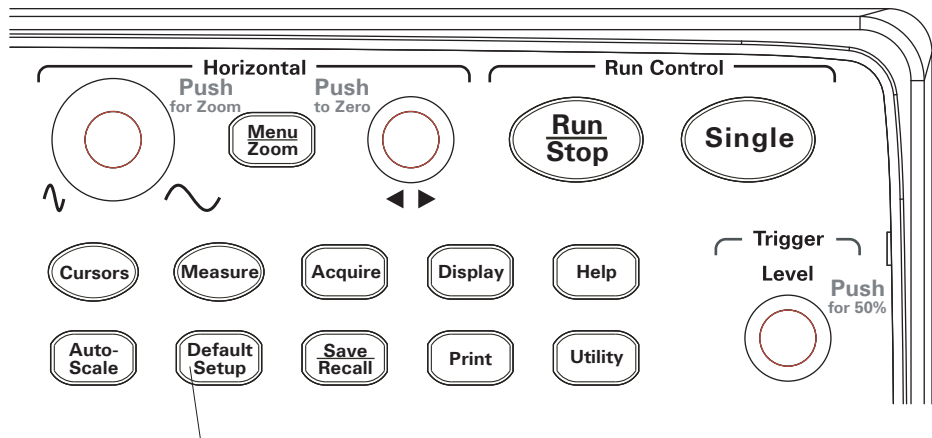

**Figure 2** [Default Setup] Key

- 2 When the Default menu appears, press **[Menu On/Off]** to turn off the menu.

(The **Undo** softkey in the Default menu lets you cancel the default setup and go back to the previous setup.)

## Step 4. Input a waveform

- 1 Input a waveform to a channel of the oscilloscope.

Use one of the supplied passive probes to input the Probe Comp signal from the front panel of the oscilloscope.


### CAUTION

To avoid damage to the oscilloscope, make sure that the input voltage at the BNC connector does not exceed the maximum voltage (300 Vrms maximum).

---

## Step 5. Use Auto-Scale

The oscilloscope has an auto-scale feature that automatically sets the oscilloscope controls for the input waveforms present.

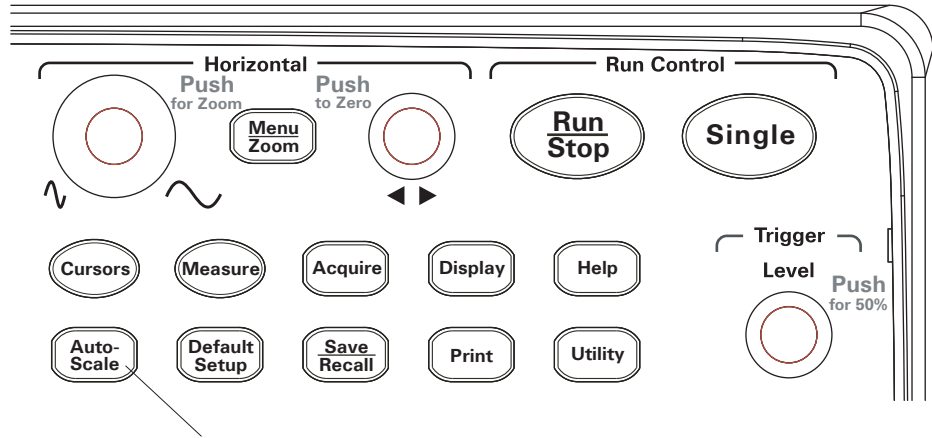

**Figure 3** [Auto-Scale] Key

Auto-scale requires waveforms with a frequency greater than or equal to 50 Hz and a duty cycle greater than 1%.

- 1 Press the front panel **[Auto-Scale]** key.
- 2 When the AUTO menu appears, press **[Menu On/Off]** to turn off the menu.

The oscilloscope turns on all channels that have waveforms applied and sets the vertical and horizontal scales appropriately. It also selects a time base range based on the trigger source. The trigger source selected is the highest-numbered channel that has a waveform applied.

(The **Undo** softkey in the AUTO menu lets you cancel the auto-scale and go back to the previous setup.)

The oscilloscope is configured to the following default control settings:

**Table 2** Auto-Scale Default Settings

Menu	Setting
Horizontal time base	Y-T (amplitude vs. time)
Acquisition mode	Normal
Vertical coupling	Adjusted to AC or DC according to the waveform.
Vertical "V/div"	Adjusted
Volts/Div	Coarse
Bandwidth limit	OFF
Waveform invert	OFF
Horizontal position	Center
Horizontal "S/div"	Adjusted
Trigger type	Edge
Trigger source	Measure the channel with input waveform automatically.
Trigger coupling	DC
Trigger voltage	Midpoint setting
Trigger sweep	Auto

## Step 6. Compensate probes

Compensate probes to match your probe to the input channel. You should compensate a probe whenever you attach it for the first time to any input channel.

### Low Frequency Compensation

For the supplied passive probes:

- 1 Set the Probe menu attenuation to 10X. If you use the probe hooktip, ensure a proper connection by firmly inserting the tip onto the probe.
- 2 Attach the probe tip to the probe compensation connector and the ground lead to the probe compensator ground connector.
- 3 Press the **[Auto-Scale]** front panel key.

Low frequency compensation adjustment



Correctly Compensated



Over Compensated



Under Compensated



**Figure 4** Low Frequency Probe Compensation


- 4 If waveform does not appear like the Correctly Compensated waveform shown in **Figure 4**, then use a nonmetallic tool to adjust the low frequency compensation adjustment on the probe for the flattest square wave possible.



## Step 7. Become familiar with the Front Panel Controls

Before using the oscilloscope, familiarize yourself with the front panel controls.


The front panel has knobs, keys, and softkeys. Knobs are used most often to make adjustments. Keys are used for run controls and to change other oscilloscope settings via menus and softkeys.

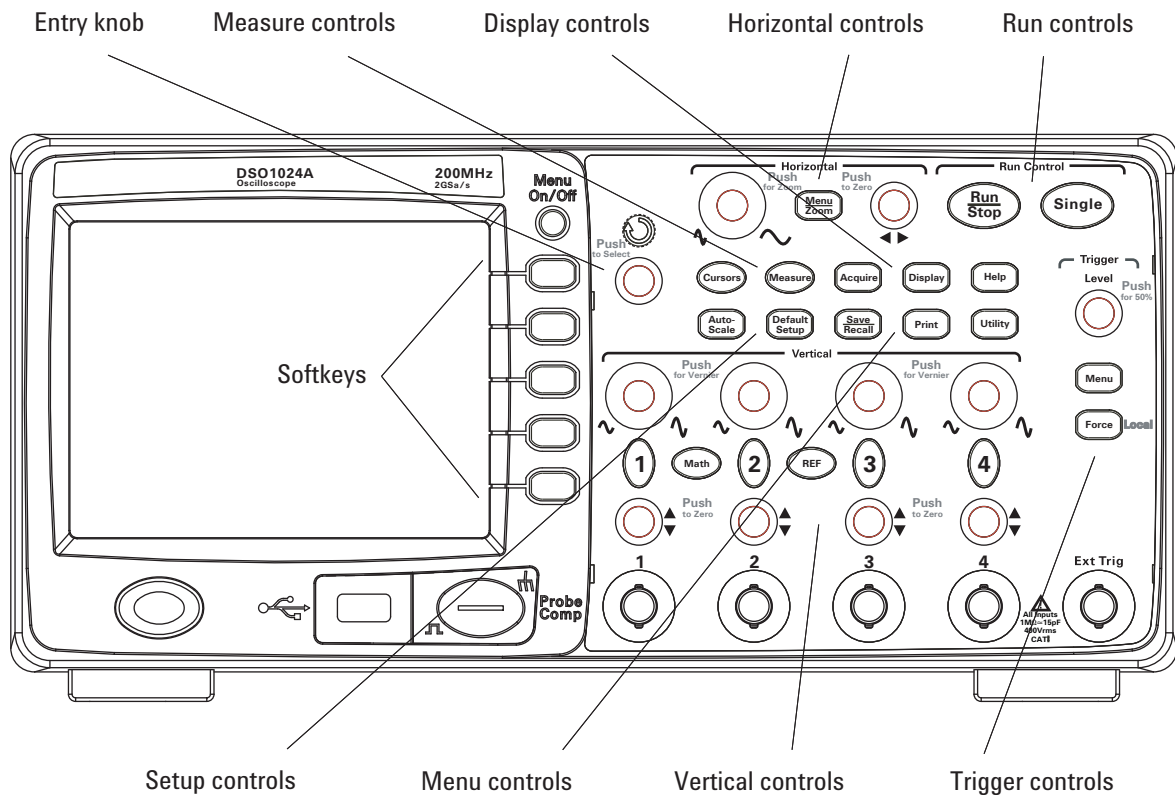

**Figure 5** Front Panel

The definitions of the front panel knobs, keys, and softkeys are as follows:

**Table 3** Front Panel Controls

Controls	Consists of these knobs and keys
Measure controls	<b>[Measure]</b> and <b>[Cursors]</b> front panel keys.
Waveform controls	<b>[Acquire]</b> and <b>[Display]</b> front panel keys.
Menu controls	<b>[Save/Recall]</b> and <b>[Utility]</b> front panel keys.
Vertical controls	Vertical position knobs, vertical scale knobs, channel ( <b>[1]</b> , <b>[2]</b> , etc.) <b>[Math]</b> , and <b>[REF]</b> front panel keys.
Horizontal controls	Position knob, <b>[Menu/Zoom]</b> front panel key, and scale knob.
Trigger controls	Trigger <b>[Level]</b> knob, <b>[Menu]</b> , and <b>[Force]</b> front panel keys.
Run controls	<b>[Run/Stop]</b> and <b>[Single]</b> front panel keys.
Setup controls	<b>[Auto-Scale]</b> and <b>[Default Setup]</b> front panel keys.
Softkeys	Five gray keys from top to bottom on the right-hand side of the screen, which select the adjacent menu items in the currently displayed menu.
 entry knob	For the adjustment defined controls.


## Front Panel Overlays for Different Languages

If you choose a language option other than English, you get a front panel overlay for your language option.

To install a front panel overlay:

- 1 Insert the tabs on the left side of the overlay into the appropriate slots on the front panel.
- 2 Gently press the overlay over the knobs and buttons.
- 3 When the overlay is against the front panel, insert the tabs on the right side of the overlay into the slots on the front panel.
- 4 Let the overlay flatten out. It should remain secure on the front panel.

## Using the Oscilloscope Softkey Menus

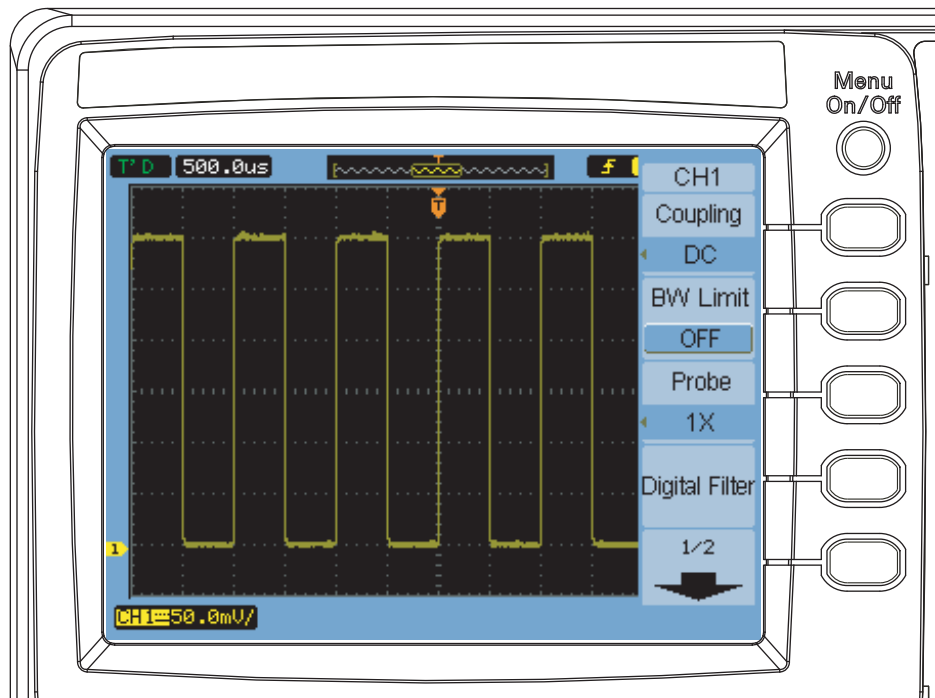

**Figure 6** Softkey Menu

When one of the oscilloscope front panel keys turns on a menu, you can use the five softkeys to choose items from the menu.

Some common menu item choices are:



Accesses the next page of items in the menu.



Accesses the previous page of items in the menu.




Returns to the previous menu in the hierarchy.

---


The **[Menu On/Off]** front panel key turns off the menu or turns on the last accessed menu on again. The **Menu Display** item in the Display menu lets you select the amount of time menus are displayed (see **"To change the menu display time"** on page 58).

## Step 8. Become familiar with the oscilloscope display

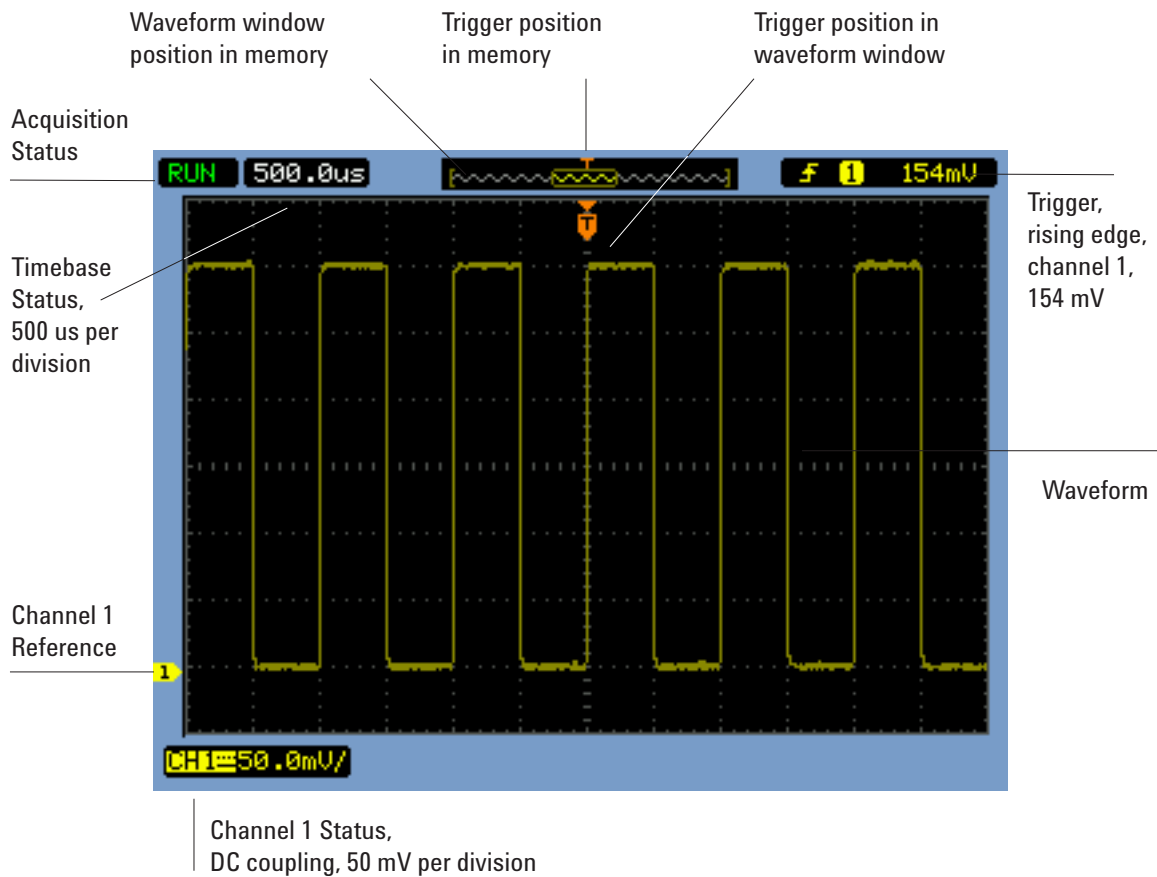**Figure 7** Oscilloscope Display

## Step 9. Use the Run Control keys

There are two front panel keys for starting and stopping the oscilloscope's acquisition system: **[Run/Stop]** and **[Single]**.

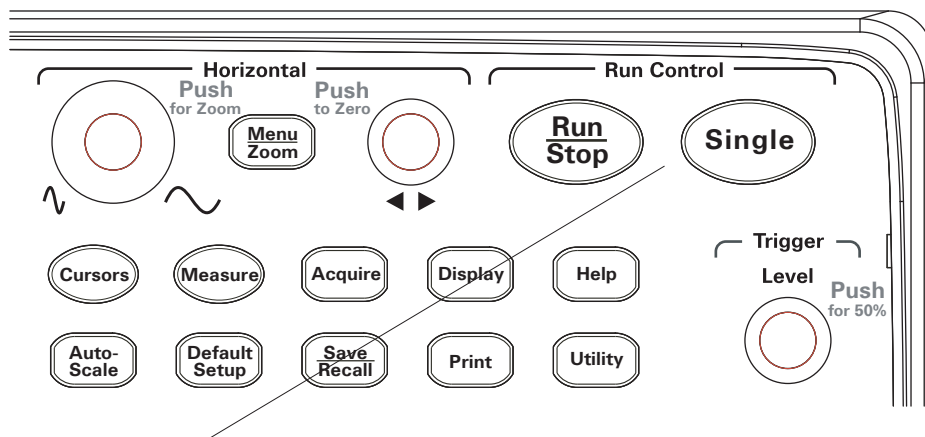


**Figure 8** Run Control Keys

- When the **[Run/Stop]** key is green, the oscilloscope is acquiring data. To stop acquiring data, press **[Run/Stop]**. When stopped, the last acquired waveform is displayed.
- When the **[Run/Stop]** key is red, data acquisition is stopped. To start acquiring data, press **[Run/Stop]**.
- To capture and display a single acquisition (whether the oscilloscope is running or stopped), press **[Single]**. After capturing and displaying a single acquisition, the **[Run/Stop]** key is red.

## Step 10. Access the built-in help

The oscilloscope has built-in quick help information. To access the built-in help:

- 1 Press the **[Help]** front panel key.

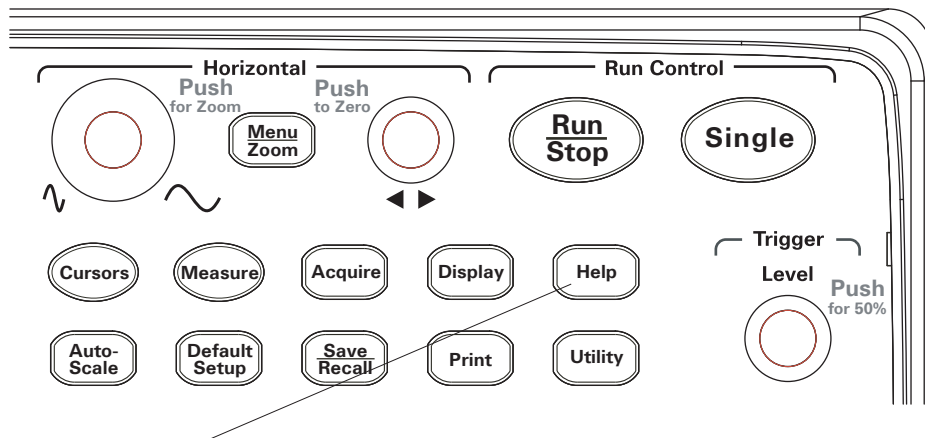


**Figure 9** [Help] Key

- 2 Press the front panel key, softkey, or pushable knob on which you would like quick help information.

The built-in help is available in 11 different languages (see **"Setting the Language (Menu and Help)"** on page 125).

## Securing the Oscilloscope

To secure a 1000A Series oscilloscope to its location, you can use a Kensington lock or the security loop.

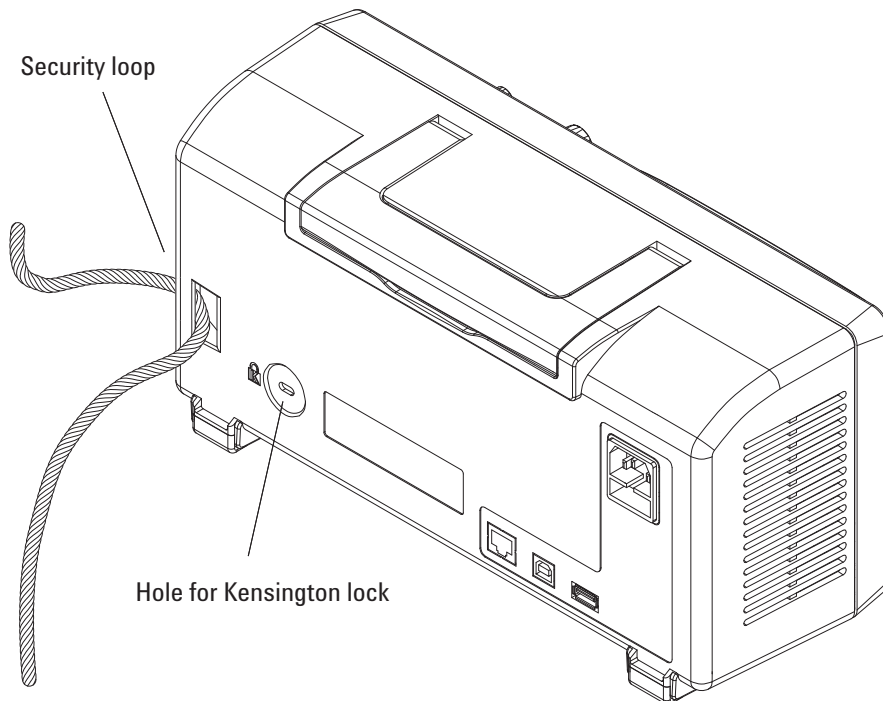

**Figure 10** Securing the Instrument



## 2 Displaying Data


Using the Horizontal Controls / 34  
Using the Vertical Controls / 41  
Using Math Function Waveforms / 50  
Using Reference Waveforms / 54  
Changing the Display Settings / 56

This chapter describes how to use the horizontal and vertical controls, channel settings, math waveforms, reference waveforms, and display settings.

## Using the Horizontal Controls


The horizontal controls consist of:

- The horizontal scale knob – changes the oscilloscope's time per division setting using the center of the screen as a reference.
- The horizontal position knob – changes the position of the trigger point relative to the center of the screen.
- The **[Menu/Zoom]** key – displays the Horizontal menu which lets you display the zoomed (delayed) time base, change the time base mode, and display the sample rate.

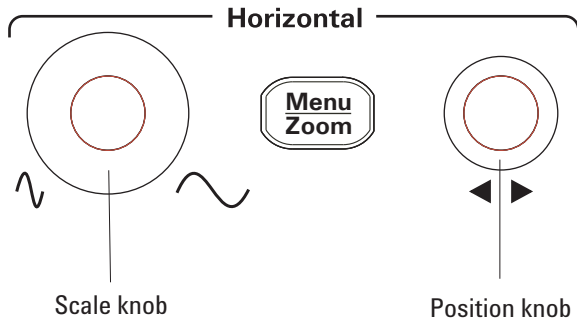

**Figure 11** Horizontal Controls

**Figure 12** shows the screen icon descriptions and control indicators.

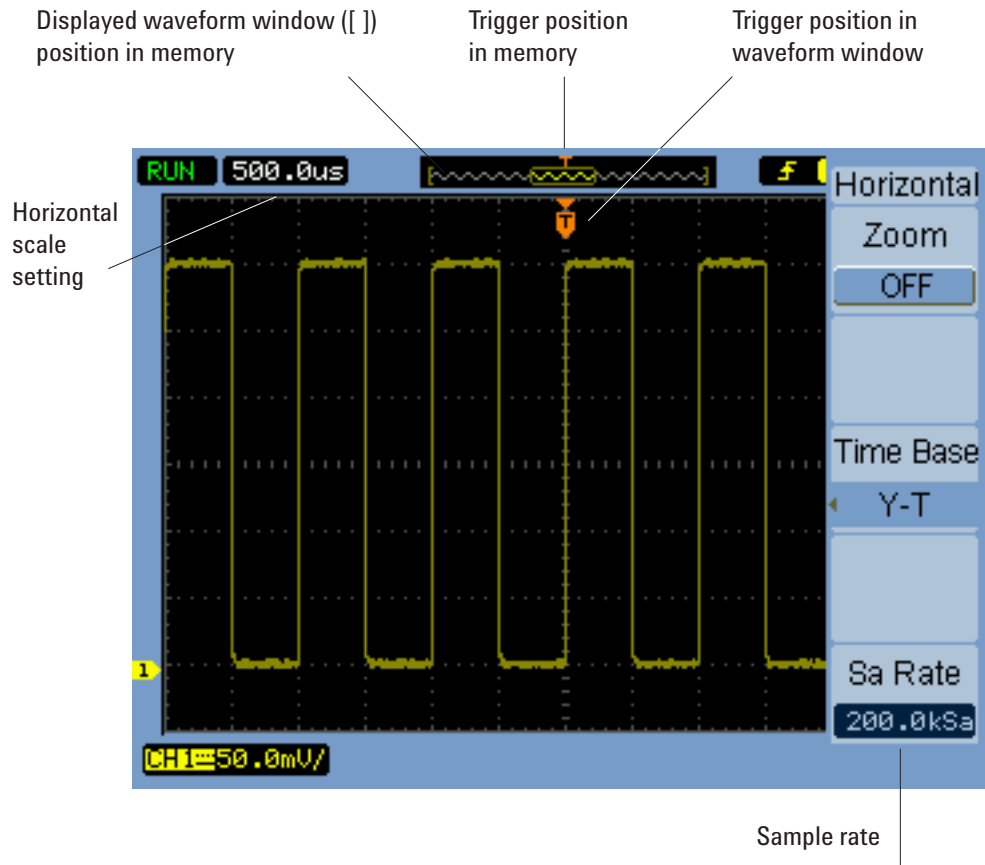

**Figure 12** Status Bar, Trigger Position, and Horizontal Scale Control Indicators

To adjust the horizontal scale

- Turn the horizontal scale knob to change the horizontal time per division (time/div) setting (and the oscilloscope's sample rate – see **"Memory Depth and Sample Rate"** on page 68).

The time/div setting changes in a 1-2-5 step sequence.

The time/div setting is also known as the *sweep speed*.

When the time/div is set to 50 ms/div or slower, the oscilloscope enters Slow Scan mode (see **Slow Scan Mode** below).

When the horizontal scale is set to 20 ns or faster, the oscilloscope uses sine(x)/x interpolation to expand the horizontal time base.

- Push the horizontal scale knob to toggle between the zoomed time base and the normal time base display (see **"To display the zoomed time base"** on page 37).

The time/div setting is displayed in the status bar at the top left of the screen. Because all channels are displayed in the same time base (except in the Alternate trigger mode), the oscilloscope displays one time/div setting for all channels.

### Slow Scan Mode

When the horizontal scale is set to 50 ms/div or slower, the oscilloscope enters Slow Scan mode.

In the Slow Scan mode, peak detect acquisition is used so that no data is missed (even though the Acquire menu may show a different acquisition mode setting). The oscilloscope acquires sufficient data for the pre-trigger part of the display, then waits for the trigger. When the trigger occurs, the oscilloscope continues to capture data for the post-trigger part of the display.

When using the Slow Scan mode to view low frequency signals, the channel coupling should be set to "DC".

The Slow Scan mode lets you see dynamic changes (like the adjustment of a potentiometer) on low frequency waveforms. For example, Slow Scan mode is often used in applications like transducer monitoring and power supply testing.

### To adjust the horizontal position

- Turn the horizontal position knob to change the position of the trigger point relative to the center of the screen.


The position knob adjusts the horizontal position of all channels, math functions, and reference waveforms.

- Push the horizontal position knob to "zero" the trigger point (in other words, move it to the center of the screen).

## To display the zoomed time base


The zoomed time base (also known as delayed sweep time base), magnifies a portion of the original waveform display (now on the top half of the screen) and displays it in a zoomed time base on the bottom half of the screen.

- 1 To toggle the zoomed time base “ON” or “OFF”, either push the horizontal scale knob or press **[Menu/Zoom]** key followed by the **Zoom** softkey in the Horizontal menu.
- 2 When the zoomed time base is “ON”:
  - The top half of the display shows the original waveform and the portion being magnified.
  - The horizontal scale knob changes the magnification (widens or narrows the area of magnification).
  - The horizontal position knob moves the area of magnification forward and backward on the original waveform.
  - The bottom half of the display shows the magnified data in the zoomed time base.

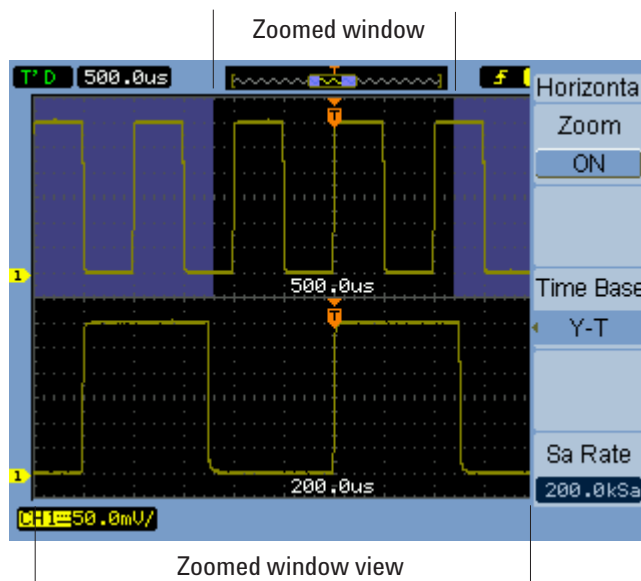

**Figure 13** Zoomed Time Base Window

To change the horizontal time base (Y-T, X-Y, or Roll)

- 1 Press **[Menu/Zoom]**.
- 2 In the Horizontal menu, press **Time Base**.
- 3 Continue pressing the **Time Base** softkey or turn the  entry knob to select between:

<b>Y-T</b>	Amplitude vs. time. This is the typical horizontal time base setting.
<b>X-Y</b>	Channel 2 (X-axis) vs. Channel 1 (Y-axis), see <b>"X-Y Format"</b> on page 38.
<b>Roll</b>	In Roll mode, the waveform display rolls from right to left, and the minimum horizontal scale setting is 500 ms/div. No trigger or horizontal position control is available. Roll mode is used in applications similar to the ones for which Slow Scan mode is used (see <b>"Slow Scan Mode"</b> on page 36).

### X-Y Format

This format compares the voltage level of two waveforms point by point. It is useful for studying phase relationships between two waveforms. This format only applies to channels 1 and 2. Choosing the X-Y display format displays channel 1 on the horizontal axis and channel 2 on the vertical axis.

The oscilloscope uses the untriggered sample acquisition mode and waveform data is displayed as dots. The sampling rate can vary from 4 kSa/s to 100 MSa/s, and the default sampling rate is 1 MSa/s.



**Figure 14** X-Y Display Format Showing Out-of-Phase Waveforms

The following modes or functions are not available in X-Y format:

- Automatic voltage or time measurements.
- Cursor measurements.
- Mask testing.
- Math function waveforms.
- Reference waveforms.
- Zoomed time base display.
- Displaying waveforms as vectors.
- Horizontal position knob.
- Trigger controls.

To view the sample rate

- 1** Press **[Menu/Zoom]**.
- 2** In the Horizontal menu, the **Sa Rate** menu item displays the sample rate used for the current horizontal scale setting.


**See Also**    **"Memory Depth and Sample Rate"** on page 68.



## Using the Vertical Controls

The vertical controls consist of:

- The channel ([1], [2], [3], and [4]), [Math], and [REF] front panel keys – turn waveforms on or off (and display or hide their menus).
- The vertical scale knobs – change the amplitude per division setting for a waveform, using either ground or the center of the screen as a reference (depending on a preference setting).
- The vertical position knobs – change the vertical position of the waveform on the screen.

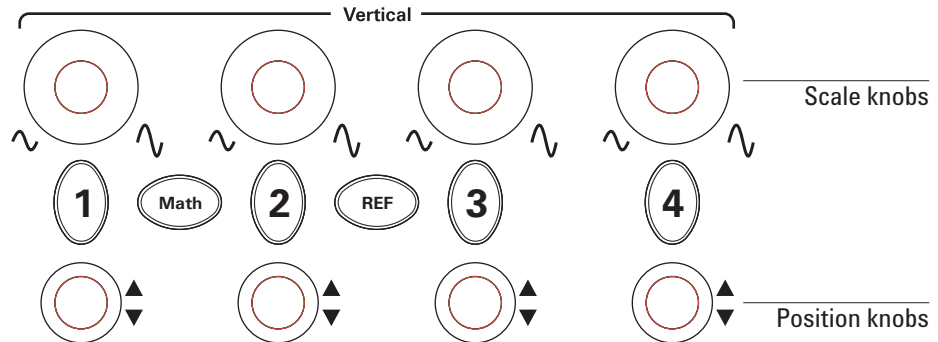

**Figure 15** Vertical Controls

To turn waveforms on or off (channel, math, or reference)

Pressing the channel ([1], [2], [3], and [4]), [Math], and [REF] front panel keys have the following effect:

- If the waveform is off, the waveform is turned on and its menu is displayed.
- If the waveform is on and its menu is not displayed, its menu will be displayed.
- If the waveform is on and its menu is displayed, the waveform is turned off and its menu goes away.

To adjust the vertical scale

When an input channel waveform is on:

- Turn its vertical scale knob to change the amplitude per division setting.

The amplitude/div setting changes in a 1-2-5 step sequence from 2 mV/div to 5 V/div (with “1X” probe attenuation).

Either ground or the center of the screen is used as a reference, depending on the “Expand Reference” preference setting (see **“To select the vertical scale reference level”** on page 131). The “center of screen” reference is not available for math function or reference waveforms.

- Push its vertical scale knob to toggle between vernier (fine scale) adjustment and normal adjustment.

With vernier adjustment, the amplitude/div setting changes in small steps between the normal (coarse scale) settings.

The **Volts/Div** item in a channel’s menu also toggles between vernier and normal adjustment (see **“To change the Volts/Div control sensitivity”** on page 47).

Vernier adjustment is not available for math function or reference waveforms.

The amplitude/div setting is displayed in the status bar at the bottom of the screen.

### To adjust the vertical position

Adjusting their vertical position lets you compare waveforms by aligning them above one another or on top of each other.

When an input channel waveform is on:


- Turn the vertical position knob to change the vertical position of the waveform on the screen.

Notice that the ground reference symbol on the left side of the display moves with the waveform.


- Push the vertical position knob to “zero” the ground reference (in other words, move it to the center of the screen).

Notice that, as you adjust the vertical position, a message showing the position of the ground reference relative to the center of the screen is temporarily displayed in the lower left-hand corner of the screen.


## To specify channel coupling

- 1 If the channel's menu is not currently displayed, press the channel key ([1], [2], [3], or [4]).
- 2 In the Channel menu, press **Coupling**.
- 3 Continue pressing the **Coupling** softkey or turn the  entry knob to select between:

<b>DC</b>	Passes both DC and AC components of the input waveform to the oscilloscope. See <a href="#">Figure 16</a> . You can quickly measure the DC component of the waveform by simply noting its distance from the ground symbol.
<b>AC</b>	Blocks the DC component of the input waveform and passes the AC component. See <a href="#">Figure 17</a> . This lets you use greater sensitivity (amplitude/div settings) to display the AC component of the waveform.
<b>GND</b>	The waveform is disconnected from the oscilloscope input.

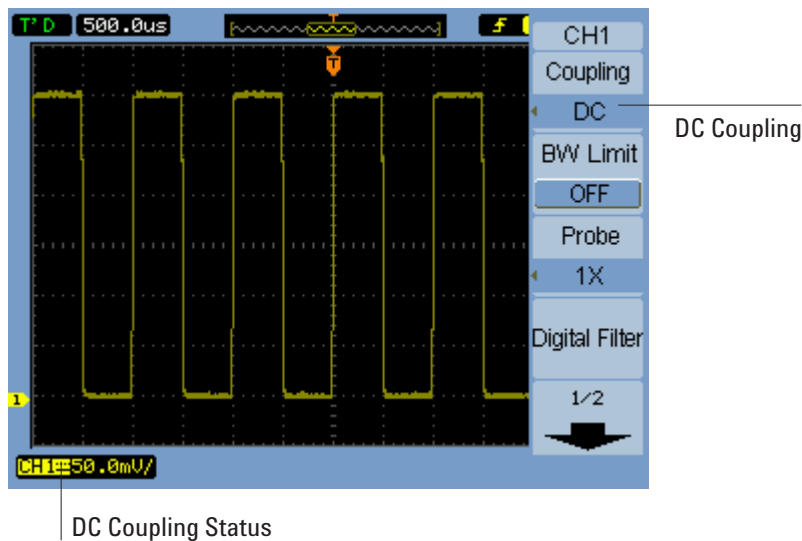

**Figure 16** DC Coupling Control

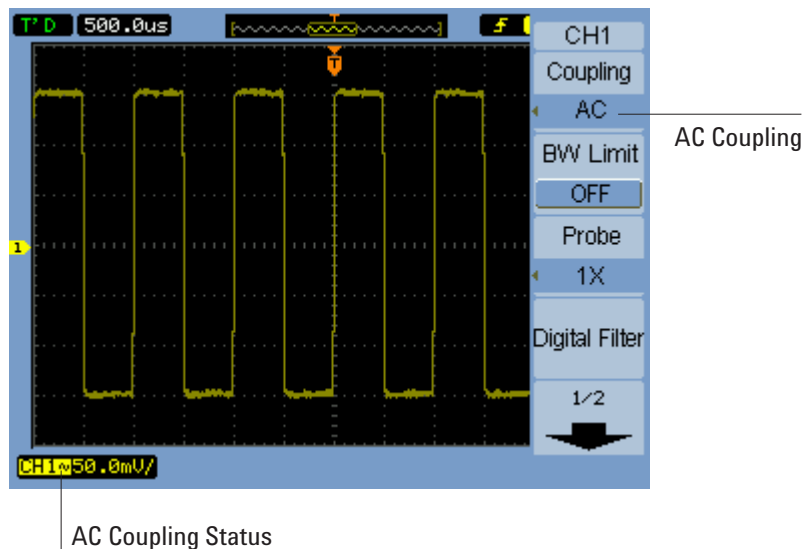

**Figure 17** AC Coupling Control

## To specify a bandwidth limit

When high frequency components of a waveform are not important to its analysis, the bandwidth limit control can be used to reject frequencies above 20 MHz. See [Figure 19](#) and [Figure 18](#).

- 1 If the channel's menu is not currently displayed, press the channel key ([1], [2], [3], or [4]).
- 2 In the Channel menu, press **BW Limit** to toggle the bandwidth limit setting "ON" and "OFF".

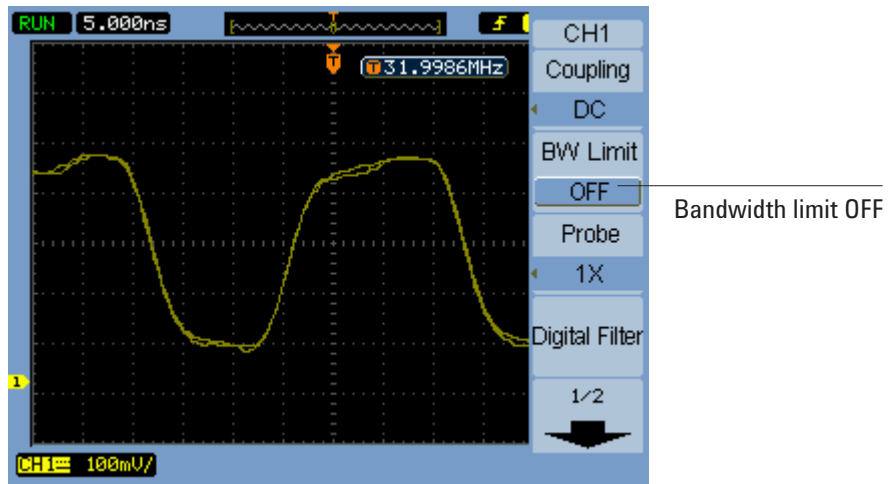


Figure 18 BW Limit Control OFF

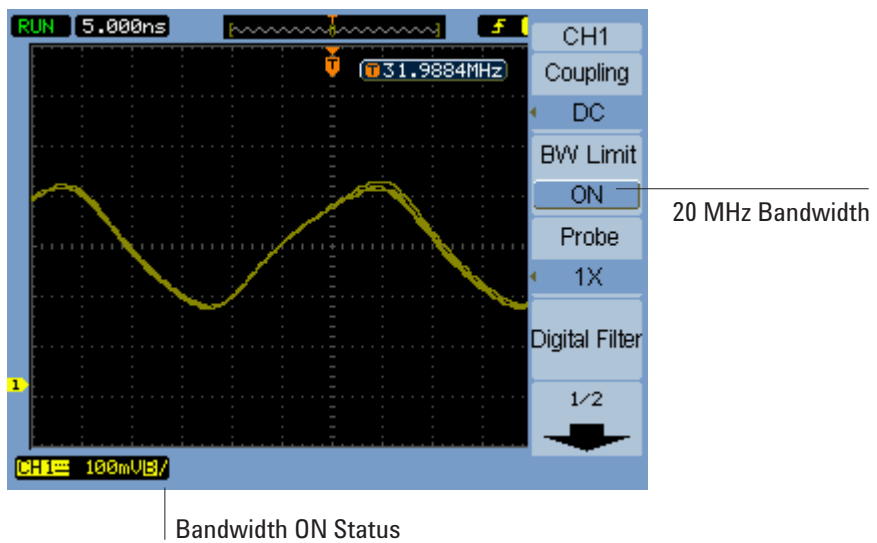



Figure 19 BW Limit Control ON

## To specify the probe attenuation

For correct measurements, you must match the oscilloscope's probe attenuation factor settings with the attenuation factors of the probes being used.


The probe attenuation factor setting changes the vertical scaling of the oscilloscope so that the measurement results reflect the actual voltage levels at the probe tip.

 
 
- 1 If the channel's menu is not currently displayed, press the channel key ([1], [2], [3], or [4]).
- 2 In the Channel menu, press **Probe**.
- 3 Continue pressing the **Probe** softkey or turn the  entry knob to select between:


<b>0.001X</b>	For 1:1000 probes.
<b>0.01X</b>	For 1:100 probes.
<b>0.1X</b>	For 1:10 probes.
<b>1X</b>	For 1:1 probes.
<b>10X</b>	For 10:1 probes.
<b>100X</b>	For 100:1 probes.
<b>1000X</b>	For 1000:1 probes.

## To use a digital filter


You can apply a digital filter to the sampled waveform data.

- 1 If the channel's menu is not currently displayed, press the channel key ([1], [2], [3], or [4]).
- 2 In the Channel menu, press **Digital Filter**.
- 3 In the Filter menu, press **Filter Type**, and continue pressing the **Filter Type** softkey or turn the  entry knob to select between:


	LPF (Low Pass Filter).
	HPF (High Pass Filter).

 

BPF (Band Pass Filter).

 

BRF (Band Reject Filter).

- 4 Depending on the type of filter selected, press **Upper Limit** and/or **Lower Limit**, and turn the  entry knob to adjust the limit.

The horizontal scale control sets the maximum value for the upper and lower limits.

Digital filters are not available when:

- The horizontal scale is 20 ns/div or lower.
- The horizontal scale is 50 ms/div or higher.

## To change the Volts/Div control sensitivity

When you need to adjust the amplitude/div setting in smaller increments, you can change the sensitivity of the vertical scale control.

- 1 If the channel's menu is not currently displayed, press the channel key (**[1]**, **[2]**, **[3]**, or **[4]**).
- 2 In the Channel menu, press **Volts/Div** to toggle between:

<b>Coarse</b>	The vertical scale knob changes the amplitude/div setting in a 1-2-5 step sequence from 2 mV/div to 10 V/div (with "1X" probe attenuation).
<b>Fine</b>	Also known as vernier, the vertical scale knob changes the amplitude/div setting in small steps between the normal (coarse scale) settings.

You can also toggle between coarse and fine settings by pushing the vertical scale knob (see **"To adjust the vertical scale"** on page 41).

## To invert a waveform

You can invert a waveform with respect to the ground level.

- 1 If the channel's menu is not currently displayed, press the channel key ([1], [2], [3], or [4]).
- 2 In the Channel menu, press **Invert** to toggle between “ON” and “OFF”.

Figure 20 and Figure 21 show the changes before and after inversion.


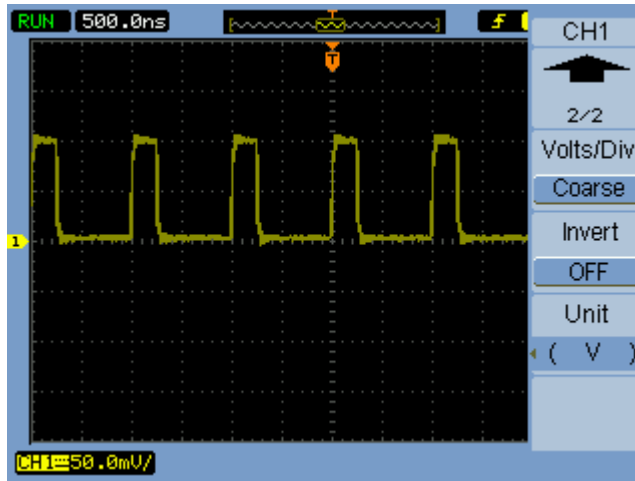



Figure 20 Waveform Before Inversion



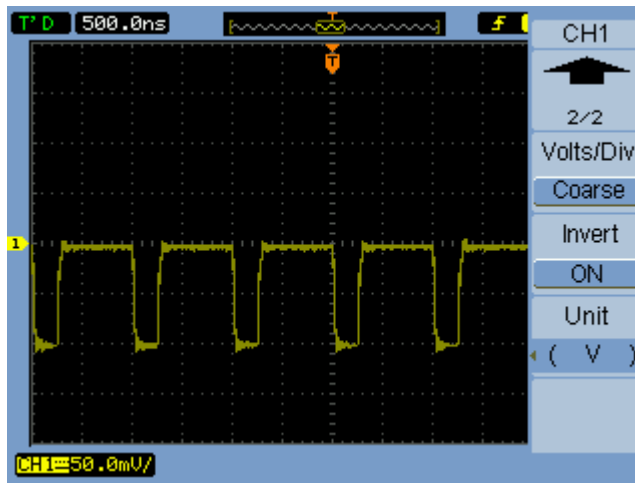

**Figure 21** Waveform After Inversion

To specify the channel units

- 1 If the channel's menu is not currently displayed, press the channel key ([1], [2], [3], or [4]).
- 2 In the Channel menu, press **Unit**.
- 3 Continue pressing the **Unit** softkey or turn the  entry knob to select between:


<b>V</b>	Volts, used with voltage probes.
<b>A</b>	Amperes, used with current probes.
<b>W</b>	Watts.
<b>U</b>	Unknown.

## Using Math Function Waveforms


The math functions control allows the selection of the math functions:

- Add.
- Subtract.
- Multiply.
- FFT (Fast Fourier Transform).

The mathematical result can be measured using the grid and cursor controls.

The amplitude of the math waveform can be adjusted using a menu item selection in the Math menu and the  entry knob. The adjustment range is in a 1-2-5 step from 0.1% to 1000%.


The math scale setting is shown at the bottom of the display.

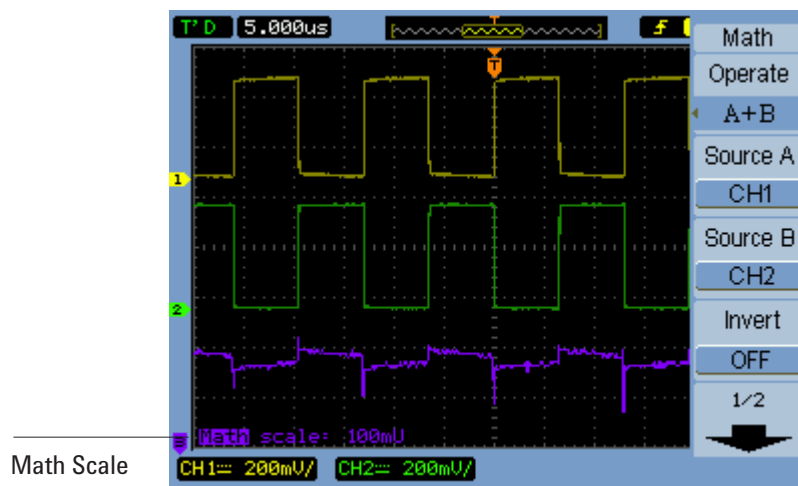

**Figure 22** Math Scale Setting Value

To add, subtract, or multiply waveforms


- 1 Press **[Math]**.
- 2 In the Math menu, press **Operate**.

- 3 Continue pressing the **Operate** softkey or turn the  entry knob to select “A + B”, “A - B”, or “A x B”.
- 4 Press **Source A**, and continue pressing the softkey to select the desired input channel.
- 5 Press **Source B**, and continue pressing the softkey to select the desired input channel.
- 6 To invert the result of the addition, subtraction, or multiplication (with respect to the reference level), select **Invert** to toggle between “ON” and “OFF”.

## To display the frequency domain using FFT

The FFT math function mathematically converts a time-domain waveform into its frequency components. FFT waveforms are useful for finding the harmonic content and distortion in systems, for characterizing noise in DC power supplies, and for analyzing vibration.


To display a waveform's FFT:

- 1 Press **[Math]**.
- 2 In the Math menu, press **Operate**.
- 3 Continue pressing the **Operate** softkey or turn the  entry knob to select “FFT”.
- 4 In the FFT menu, press **Source**, and continue pressing the softkey to select the desired input channel.

### NOTE

The FFT of a waveform that has a DC component or offset can cause incorrect FFT waveform magnitude values. To minimize the DC component, choose AC Coupling on the source waveform.





To reduce random noise and aliasing components (in repetitive or single-shot waveforms), set the oscilloscope acquisition mode to averaging.

- 5 Press **Window**, and continue pressing the softkey or turn the  entry knob to select the desired window:

There are four FFT windows. Each window has trade-offs between frequency resolution and amplitude accuracy. What you want to measure and your source waveform characteristics help determine which window to use. Use the guidelines in **Table 4** to select the best window.

**Table 4** FFT Window Characteristics

Window	Characteristics	Best for measuring
Rectangle	Best frequency resolution, worst magnitude resolution. This is essentially the same as no window.	Transients or bursts, the waveform levels before and after the event are nearly equal. Equal-amplitude sine waves with fixed frequencies. Broadband random noise with a relatively slow varying spectrum.
Hanning, Hamming	Better frequency, poorer magnitude accuracy than Rectangular. Hamming has slightly better frequency resolution than Hanning.	Sine, periodic, and narrow-band random noise. Transients or bursts where the waveform levels before and after the events are significantly different.
Blackman	Best magnitude, worst frequency resolution.	Single frequency waveforms, to find higher order harmonics.

- 6 Press **Display** to toggle between a “Split” screen display and a “Full Screen” display.
- 7 Press  and turn the  entry knob to adjust the vertical position of the FFT waveform.
- 8 Press  and turn the  entry knob to adjust the vertical scale of the FFT waveform.
- 9 Press **Scale** to toggle between “ $V_{RMS}$ ” and “ $dBV_{RMS}$ ” units.

**NOTE**

To display FFT waveforms with a large dynamic range, use the  $dBV_{rms}$  scale. The  $dBV_{rms}$  scale displays component magnitudes using a log scale.

- 10 Use the horizontal position knob to adjust the frequency per division.  
The frequency scale is displayed on the screen. Use this to display the frequencies associated with the peaks in the FFT waveform.

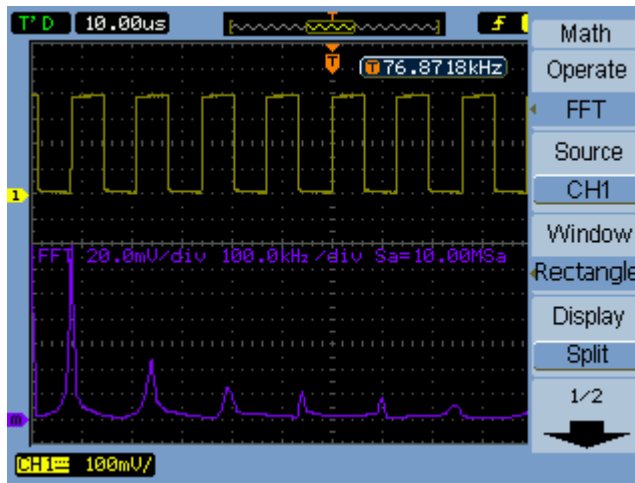


Figure 23 FFT Waveform

**NOTE****FFT Resolution**

The FFT resolution is the quotient of the sampling rate and the number of FFT points ( $f_s/N$ ). With a fixed number of FFT points (1024), the lower the sampling rate, the better the resolution.

**NOTE****Nyquist Frequency and Aliasing in the Frequency Domain**

The Nyquist frequency is the highest frequency that any real-time digitizing oscilloscope can acquire without aliasing. This frequency is half of the sample rate. Frequencies above the Nyquist frequency will be under sampled, which causes aliasing. The Nyquist frequency is also called the folding frequency because aliased frequency components *fold back* from that frequency when viewing the frequency domain.

## Using Reference Waveforms

You can save a reference waveform to an internal, nonvolatile memory location and then display it on the oscilloscope along with other captured waveforms.


You can also export/import reference waveforms to/from an external USB drive when it is connected to the front panel USB host port.

Reference waveforms are displayed (that is, turned on/off) just like other waveforms (see [page 41](#)).

### NOTE


The reference waveform function is not available in X-Y mode.

### To save a reference waveform

- 1 Before saving a waveform as a reference, set the waveform's scale and position as desired.  
These settings will become the reference waveform's defaults.
- 2 Press **[REF]**.
- 3 In the REF menu, press **Source**, and continue pressing the softkey or turn the  entry knob to select the waveform you want to save.
- 4 Press **Location** to choose "Internal".
- 5 Press **Save**.

### To export or import reference waveforms

To export or import from external storage (when a USB drive is connected to the front panel USB host port):

- 1 Press **[REF]**.
- 2 If exporting a waveform, in the REF menu, press **Source**, and continue pressing the softkey or turn the  entry knob to select the waveform you want to export.
- 3 Press **Location** to choose "External".
- 4 Press **Save** or **Import**.


- 5 Use the disk manager dialog to navigate to the folder where you want to export the file or to select the file you want to import (see **"To navigate the directory hierarchy"** on page 115).
- 6 In the Save or Import menu:
  - To export the waveform, press **New File**, enter the filename (see **"To edit folder/file names"** on page 116), and press **Save**.
  - To load the selected waveform (.wfm file), press **Import**.

To return the reference waveform to its default scale

- 1 Press **[REF]**.
- 2 In the REF menu, press **Reset**.

The scale and position of the waveform as originally saved are restored.

# Changing the Display Settings

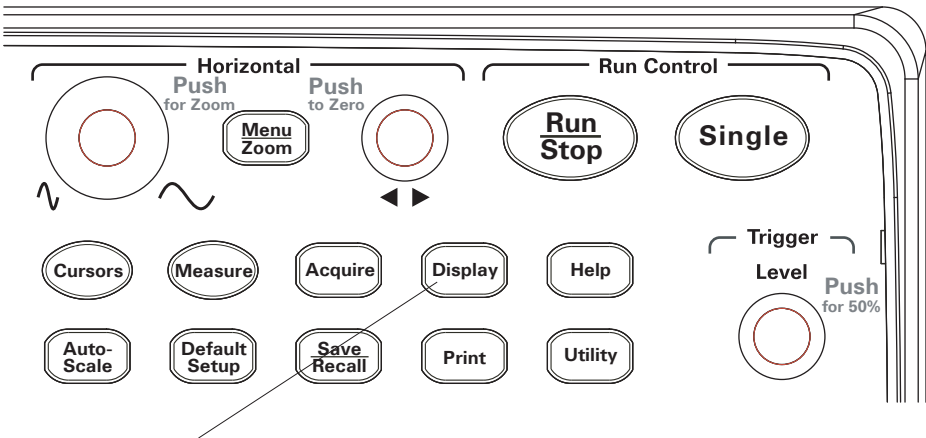

**Figure 24** [Display] Key

To display waveforms as vectors or dots

- 1 Press **[Display]**.
- 2 In the Display menu, press **Type** to toggle the waveform display between:

<b>Vectors</b>	The oscilloscope connects the sample points by using digital interpolation. Digital interpolation maintains linearity by using a $\sin(x)/x$ digital filter. The digital interpolation is suitable for real time sampling and is most effective at 20 ns or faster horizontal scale settings.
<b>Dots</b>	The sample points are displayed.

To clear the display

- 1 Press **[Display]**.
- 2 In the Display menu, press **Clear**.



## To set waveform persistence

- 1 Press **[Display]**.
- 2 In the Display menu, press **Persist** to toggle the waveform display between:

---


<b>Infinite</b>	Sample points remain displayed until the display is cleared or persistence is set to “OFF”.
-----------------	---

---

<b>OFF</b>
------------

---

## To adjust waveform intensity

- 1 Press **[Display]**.
- 2 In the Display menu, press **Intensity** and turn the  entry knob to adjust the waveform intensity.

### To display graded waveform intensity


While the oscilloscope is running, waveforms show data from multiple acquisitions. You can cause acquisition data to gradually disappear (similar to analog oscilloscopes).




- 1 Press **[Display]**.
- 2 In the Display menu, press **Grading** to toggle the waveform display between:

<b>ON</b>	The most recent data in the waveform is displayed at the highest intensity, and it gradually disappears over time.
<b>OFF</b>	All data in the waveform is displayed at the same intensity.

While waveforms are displayed with graded intensity, you can adjust the normal waveform intensity to bring out the graded detail.

### To change the grid

- 1 Press **[Display]**.
- 2 In the Display menu, press **Grid**, and continue pressing the softkey or turn the  entry knob to select between:


	Display grid and coordinates on the axes.
	Displays coordinates on the axes.
	Turns off the grid and coordinates.

### To change the menu display time

The menu display time is how long menus remain on the screen after a front panel key or softkey has been pressed.

- 1 Press **[Display]**.
- 2 In the Display menu, press **Menu Display**, and continue pressing the softkey or turn the  entry knob to select “1 S”, “2 S”, “5 S”, “10 S”, “20 S”, or “Infinite” menu display time.

## To adjust the grid brightness

- 1 Press **[Display]**.
- 2 In the Display menu, press **GridBright** and turn the  entry knob to adjust the grid brightness.

## To invert screen colors

- 1 Press **[Display]**.
- 2 In the Display menu, press **Screen** to toggle the screen between “Normal” or “Inverted” colors.

Inverted screen colors are sometimes useful when printing or saving screens.

### To select screen persistence

The screen persistence setting specifies what is displayed on the screen when acquisitions are stopped.

To change the screen persistence setting:

- 1 Press **[Display]**.
- 2 In the Display menu, press **Screen Persist** to toggle between:



When acquisitions are stopped, the screen may show data from many acquisitions.



When acquisitions are stopped, the last acquisition is displayed.

---

## 3 Capturing Data

Overview of Sampling /	62
Choosing the Acquisition Mode /	69
Recording/Playing-back Waveforms /	74
Adjusting the Trigger Level /	78
Choosing the Trigger Mode /	80
Setting Other Trigger Parameters /	87
Using the External Trigger Input /	91

This chapter describes sampling and acquisition modes and how to set up triggers.

## Overview of Sampling

To understand the oscilloscope's sampling and acquisition modes, it is helpful to understand sampling theory, aliasing, oscilloscope bandwidth and sample rate, oscilloscope rise time, oscilloscope bandwidth required, and how memory depth affects sample rate.


### Sampling Theory

The Nyquist sampling theorem states that for a limited bandwidth (band-limited) signal with maximum frequency  $f_{MAX}$ , the equally spaced sampling frequency  $f_S$  must be greater than twice the maximum frequency  $f_{MAX}$ , in order to have the signal be uniquely reconstructed without aliasing.

$$f_{MAX} = f_S/2 = \text{Nyquist frequency } (f_N) = \text{folding frequency}$$

### Aliasing

Aliasing occurs when signals are under-sampled ( $f_S < 2f_{MAX}$ ). Aliasing is the signal distortion caused by low frequencies falsely reconstructed from an insufficient number of sample points.

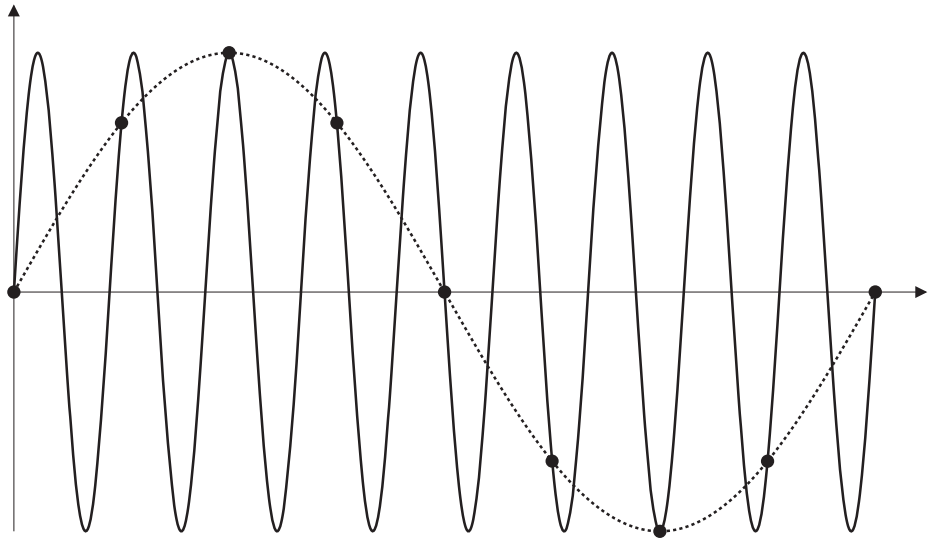


**Figure 25** Aliasing

## Oscilloscope Bandwidth and Sample Rate

An oscilloscope's bandwidth is typically described as the lowest frequency at which input signal sine waves are attenuated by 3 dB (~30% amplitude error).


At the oscilloscope bandwidth, sampling theory says the required sample rate is  $f_S = 2f_{BW}$ . However, the theory assumes there are no frequency components above  $f_{MAX}$  ( $f_{BW}$  in this case) and it requires a system with an ideal brick-wall frequency response.

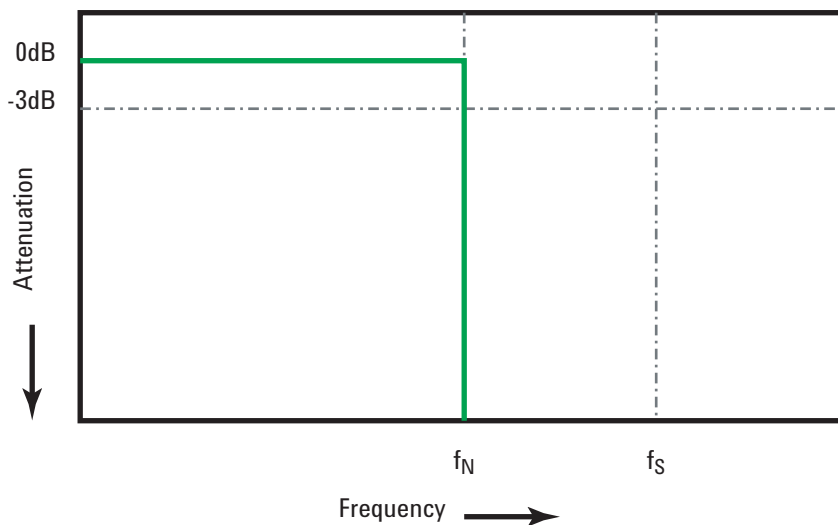

**Figure 26** Theoretical Brick-Wall Frequency Response

However, digital signals have frequency components above the fundamental frequency (square waves are made up of sine waves at the fundamental frequency and an infinite number of odd harmonics), and typically, for 1 GHz bandwidths and below, oscilloscopes have a Gaussian frequency response.



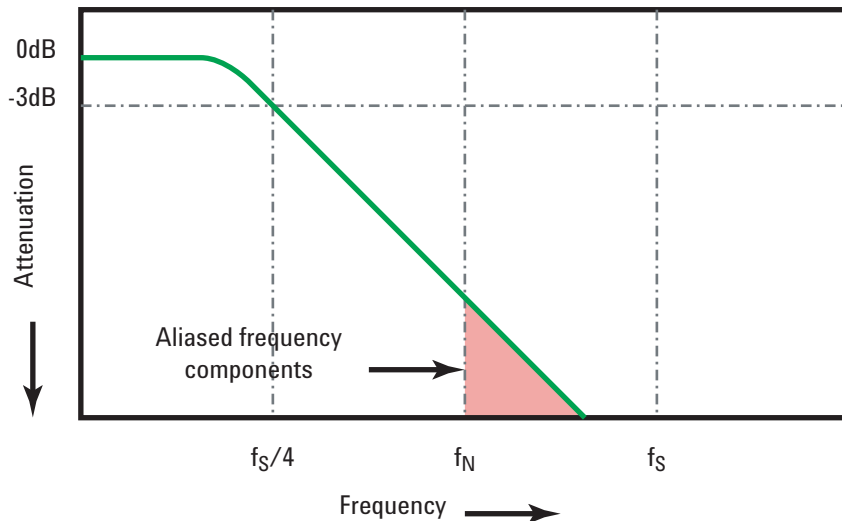

Limiting oscilloscope bandwidth ( $f_{BW}$ ) to 1/4 the sample rate ( $f_s/4$ ) reduces frequency components above the Nyquist frequency ( $f_N$ ).

**Figure 27** Sample Rate and Oscilloscope Bandwidth

So, in practice, an oscilloscope's sample rate should be four or more times its bandwidth:  $f_s = 4f_{BW}$ . This way, there is less aliasing, and aliased frequency components have a greater amount of attenuation.

**See Also** *Evaluating Oscilloscope Sample Rates vs. Sampling Fidelity: How to Make the Most Accurate Digital Measurements*, Keysight Application Note 1587 (<http://literature.cdn.Keysight.com/litweb/pdf/5989-5732EN.pdf>)

## Oscilloscope Rise Time

Closely related to an oscilloscope's bandwidth specification is its rise time specification. Oscilloscopes with a Gaussian-type frequency response have an approximate rise time of  $0.35/f_{BW}$  based on a 10% to 90% criterion.

An oscilloscope's rise time is not the fastest edge speed that the oscilloscope can accurately measure. It is the fastest edge speed the oscilloscope can possibly produce.

# Oscilloscope Bandwidth Required

The oscilloscope bandwidth required to accurately measure a signal is primarily determined by the signal's rise time, not the signal's frequency. You can use these steps to calculate the oscilloscope bandwidth required:

- 1 Determine the fastest edge speeds.

You can usually obtain rise time information from published specifications for devices used in your designs.

- 2 Compute the maximum “practical” frequency component.

From Dr. Howard W. Johnson’s book, *High-Speed Digital Design – A Handbook of Black Magic*, all fast edges have an infinite spectrum of frequency components. However, there is an inflection (or “knee”) in the frequency spectrum of fast edges where frequency components higher than  $f_{knee}$  are insignificant in determining the shape of the signal.

$$f_{knee} = 0.5 / \text{signal rise time (based on 10\% - 90\% thresholds)}$$

$$f_{knee} = 0.4 / \text{signal rise time (based on 20\% - 80\% thresholds)}$$


- 3 Use a multiplication factor for the required accuracy to determine the oscilloscope bandwidth required.

Required accuracy	Oscilloscope band width required
20%	$f_{BW} = 1.0 \times f_{knee}$
10%	$f_{BW} = 1.3 \times f_{knee}$
3%	$f_{BW} = 1.9 \times f_{knee}$

**See Also** *Choosing an Oscilloscope with the Right Bandwidth for your Application*, Keysight Application Note 1588  
[\(http://literature.cdn.Keysight.com/litweb/pdf/5989-5733EN.pdf\)](http://literature.cdn.Keysight.com/litweb/pdf/5989-5733EN.pdf)

## Real-Time Sampling

The 1000A Series oscilloscopes provide real-time sampling. In other words, waveforms are sampled at uniformly spaced intervals. See **Figure 28**.

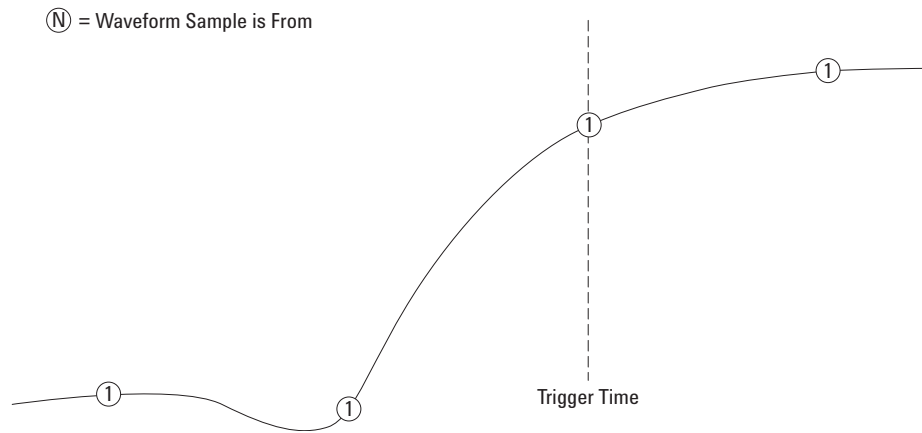

**Figure 28** Real-Time Sampling Mode

The 1000A Series oscilloscopes provide real-time sampling rates up to 2 GSa/s.

## Memory Depth and Sample Rate

The number of points of oscilloscope memory is fixed (except when divided between channel pairs), and there is a maximum sample rate associated with oscilloscope's analog-to-digital converter; however, the actual sample rate is determined by the time of the acquisition (which is set according to the oscilloscope's horizontal time/div scale).

$$\text{sample rate} = \text{number of samples} / \text{time of acquisition}$$

For example, when storing 10 us of data in 10,000 points of memory, the actual sample rate is 1 GSa/s.


Likewise, when storing 1 s of data in 10,000 points of memory, the actual sample rate is 10 kSa/s.

The actual sample rate, is displayed in the horizontal Horizontal menu (see **"To view the sample rate"** on page 40).

The oscilloscope achieves the actual sample rate by throwing away (decimating) unneeded samples.

## Choosing the Acquisition Mode

The oscilloscope can operate in normal, average, or peak detect acquisition modes. You can choose the oscilloscope's acquisition mode in the Acquire menu (accessed by pressing the **[Acquire]** front panel key).

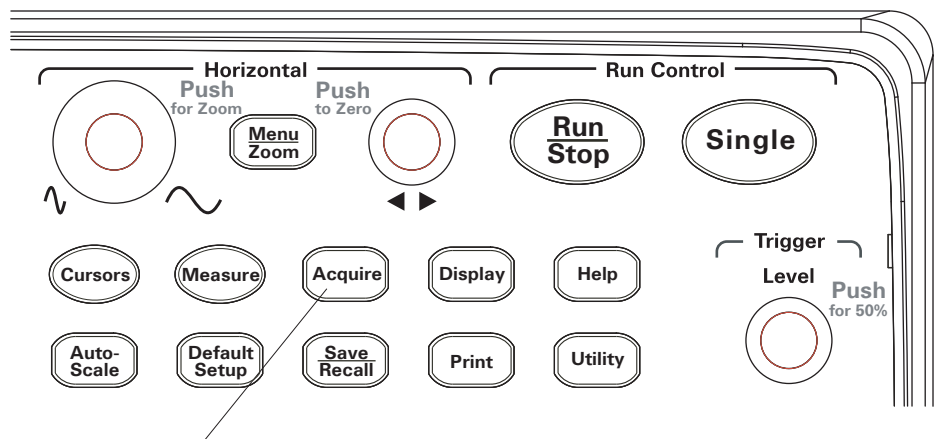


**Figure 29** Acquire Key

### To select the Normal acquisition mode

In the Normal acquisition mode, acquisitions are made and displayed one after the other.


To select the Normal acquisition mode:

- 1 Press **[Acquire]**.
- 2 In the Acquire menu, press **Acquisition**.
- 3 Continue pressing the **Acquisition** softkey or turn the  entry knob to select "Normal".


### To select the Average acquisition mode

In the Average acquisition mode, acquisitions are made, and the running average over the specified number of acquisitions is displayed.

Use the Average acquisition mode to remove random noise from the waveform and to improve measurement accuracy.

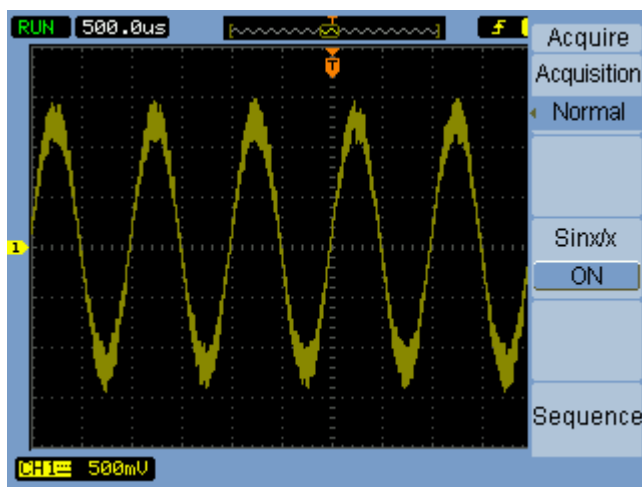

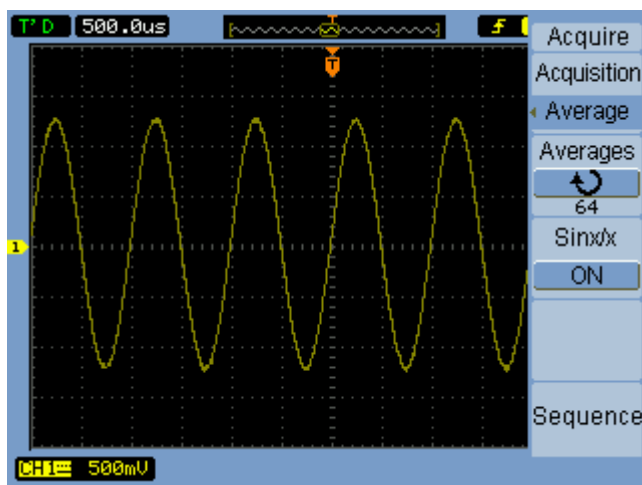

**Figure 30** Noisy Waveform Without Averaging



**Figure 31** Noisy Waveform With Averaging

The Average acquisition mode decreases the screen refresh rate.


To select the Average acquisition mode:

- 1 Press **[Acquire]**.
- 2 In the Acquire menu, press **Acquisition**.
- 3 Continue pressing the **Acquisition** softkey or turn the  entry knob to select "Average".
- 4 Press **Averages** and turn the  entry knob to select the desired number (2, 4, 8, 16, 32, 64, 128, or 256).

## To select the Peak Detect acquisition mode

In Normal or Average acquisition modes, at longer horizontal time/div settings, the oscilloscope's analog-to-digital converter samples at a rate that yields more samples than can be stored in a limited amount of oscilloscope memory. Consequently, samples are thrown away (decimated), and you can miss narrow excursions on a signal.


However, in the Peak Detect acquisition mode, acquisitions are made at the fastest sample rate, and the minimum and maximum values for the period associated with the actual sample rate are stored. This way, you can capture narrow excursions on a signal at longer horizontal time/div settings.

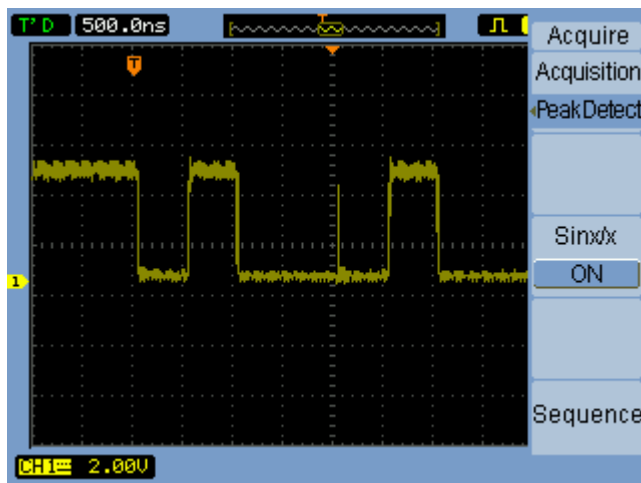

**Figure 32** Peak Detect Waveform

Because minimum and maximum values for a sample period are stored, you can use the Peak Detect acquisition mode to avoid waveform aliasing.

To select the Peak Detect acquisition mode:

- 1** Press **[Acquire]**.
- 2** In the Acquire menu, press **Acquisition**.
- 3** Continue pressing the **Acquisition** softkey or turn the  entry knob to select "Peak Detect".



## To turn OFF/ON sine(x)/x interpolation

When sample points are displayed as vectors (instead of dots) and sine(x)/x interpolation is on, curved lines are drawn between sample points. When sine(x)/x interpolation is off, straight lines are drawn.

The effects of sine(x)/x interpolation are only noticeable when the horizontal scale is set to 20 ns or faster.

- 1** Press **[Acquire]**.
- 2** In the Acquire menu, press **Sinx/x** to turn sine(x)/x interpolation “OFF” or “ON”.


## Recording/Playing-back Waveforms

You can record waveforms from input channels or from the mask test output, with a maximum acquisition depth of 800 frames.


The ability to record mask test output is especially useful for capturing abnormal waveforms over a long period of time.

### To record waveforms

To record waveforms:


- 1 Press **[Acquire]**.
- 2 In the Acquire menu, press **Sequence**.
- 3 In the Sequence menu, press **Mode**.
- 4 Continue pressing the **Mode** softkey or turn the  entry knob to select Record.

### To select the source channel for recording

- 1 In the Sequence menu (**[Acquire]** > **Sequence** > **Mode=Record**), press **Source**.
- 2 Continue pressing the **Source** softkey or turn the  entry knob to select the desired input channel or the mask test output.

To specify the mask test output, see **"To set the mask test output condition"** on page 127.

### To select the number of frames to record

- 1 In the Sequence menu (**[Acquire]** > **Sequence** > **Mode=Record**), press **End Frame**.
- 2 Turn the  entry knob to select a number from 1 to 800.

### To start/stop recording

- 1 In the Sequence menu (**[Acquire]** > **Sequence** > **Mode=Record**), press **Operate** to start or stop recording.



Appears on the menu when not recording; press **Operate** to start recording.

---



Appears on the menu when recording; press **Operate** to stop recording.

### To select the interval between recorded frames

- 1 In the Sequence menu ([**Acquire**] > **Sequence** > **Mode=Record**), press **Interval**.
- 2 Turn the ↻ entry knob to select an interval from 1 ms to 1000 s.

### To play-back waveforms

To play-back waveforms:

- 1 Press [**Acquire**].
- 2 In the Acquire menu, press **Sequence**.
- 3 In the Sequence menu, press **Mode**.
- 4 Continue pressing the **Mode** softkey or turn the ↻ entry knob to select “Play back”.

### To play-back/stop the recording

- 1 In the Sequence menu ([**Acquire**] > **Sequence** > **Mode=Play back**), press **Operate** to play-back or stop the recording.



Appears on the menu when not playing-back; press **Operate** to start playing-back the recording.



Appears on the menu when playing-back; press **Operate** to stop playing-back.

### To select continuous or one-time play-back

- 1 In the Sequence menu ([**Acquire**] > **Sequence** > **Mode=Play back**), press **Play Mode** to toggle between:




Continuous play-back.




One-time play-back.


### To select the interval between played-back frames

- 1 In the Sequence menu ([**Acquire**] > **Sequence** > **Mode=Play back**), press **Interval**.
- 2 Turn the  entry knob to select an interval from 1 ms to 20 s.


### To select the start frame

- 1 In the Sequence menu ([**Acquire**] > **Sequence** > **Mode=Play back**), press **Start Frame**.
- 2 Turn the  entry knob to select a number from 1 to 800.

### To select the current frame


- 1 In the Sequence menu ([**Acquire**] > **Sequence** > **Mode=Play back**), press **Current Frame**.
- 2 Turn the  entry knob to select a number from 1 to 800.

### To select the end frame


- 1 In the Sequence menu ([**Acquire**] > **Sequence** > **Mode=Play back**), press **End Frame**.
- 2 Turn the  entry knob to select a number from 1 to 800.

## To store recorded waveforms

To store recorded waveforms:


- 1 Press [**Acquire**].
- 2 In the Acquire menu, press **Sequence**.
- 3 In the Sequence menu, press **Mode**.
- 4 Continue pressing the **Mode** softkey or turn the  entry knob to select "Storage".

### To select the start frame

- 1 In the Sequence menu ([**Acquire**] > **Sequence** > **Mode=Storage**), press **Start Frame**.
- 2 Turn the  entry knob to select a number from 1 to 800.

### To select the end frame

- 1 In the Sequence menu ([**Acquire**] > **Sequence** > **Mode=Storage**), press **End Frame**.

- 2 Turn the  entry knob to select a number from 1 to 800.

### To select internal/external recording storage location

- 1 In the Sequence menu (**[Acquire]** > **Sequence** > **Mode=Storage**), press **Location** to toggle between Internal and External.

<b>Internal</b>	Recordings are saved and loaded from oscilloscope internal memory.
<b>External</b>	Recordings are saved, loaded, exported, and imported from an external USB drive.

### To save a recording

- 1 In the Sequence menu (**[Acquire]** > **Sequence** > **Mode=Storage**), press **Save**.
- 2 If the External location has been selected, use the Disk Manager to name and save the waveform recording file. See **"Using the Disk Manager"** on page 114.


### To load a recording

- 1 In the Sequence menu (**[Acquire]** > **Sequence** > **Mode=Storage**), press **Load**.
- 2 If the External location has been selected, use the Disk Manager to select and load the waveform recording file. See **"Using the Disk Manager"** on page 114.

### To import/export recordings

- 1 Because you can only export and import waveform recordings from an external drive, select the External location. See **"To select internal/external recording storage location"** on page 77.
- 2 In the Sequence menu (**[Acquire]** > **Sequence** > **Mode=Storage**), press **Imp./Exp..**
- 3 Use the Disk Manager to select the file and import or export the waveform recording. See **"Using the Disk Manager"** on page 114.

## Adjusting the Trigger Level

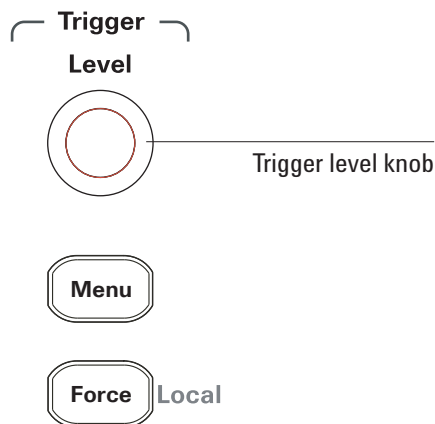

**Figure 33** Trigger Controls

### To adjust the trigger level

- Turn the trigger **[Level]** knob.
- Two things happen:
- The trigger level value is displayed at the lower left-hand corner of the screen.
  - A line is displayed showing the location of the trigger level with respect to the waveform (except when using AC coupling or LF reject coupling modes).
  - Push the trigger **[Level]** knob to set the level at 50% of the signal's vertical amplitude.

### To force a trigger

To make an acquisition even if no valid trigger has been found:

- 1 Press **[Force]**.

Forcing a trigger is useful, for example, when you want to display the DC voltage of a level signal.

The **[Force]** key has no effect if the acquisition is already stopped.

When the oscilloscope's front panel is locked by a remote program (shown by a red "Rmt" on the upper-right part of the display), pressing the **[Force]** key returns the front panel to Local control.

# Choosing the Trigger Mode

The trigger determines when captured data should be stored and displayed.




When a trigger is set up properly, it can convert unstable displays or blank screens into meaningful waveforms.

When the oscilloscope starts to acquire a waveform, it collects enough data so that it can draw the waveform to the left of the trigger point. The oscilloscope continues to acquire data while waiting for the trigger condition to occur. After it detects a trigger, the oscilloscope continues to acquire enough data so that it can draw the waveform to the right of the trigger point.

The oscilloscope provides these trigger modes:

<b>Edge</b>	Can be used with analog and digital circuits. An edge trigger occurs when the trigger input passes through a specified voltage level with the specified slope.
<b>Pulse</b>	Is used to find pulses with certain widths.
<b>Video</b>	Is used to trigger on fields or lines for standard video waveforms.
<b>Pattern</b>	Is used to trigger on patterns from all input channels.
<b>Alternate</b>	Is used to trigger on non-synchronized signals.


## To set up edge triggers

- 1 Press **[Menu]**.
- 2 In the Trigger menu, press **Mode**.
- 3 Continue pressing the **Mode** softkey or turn the  entry knob to select “Edge”.
- 4 Then, either push the  entry knob or press **Mode** again.
- 5 Press **Source** and continue pressing the softkey or turn the  entry knob to select the waveform to trigger on:

<b>CH1 - CH4</b>	The oscilloscope input channel.
<b>EXT</b>	The external trigger input.



<b>EXT/5</b>	The (5:1) attenuated external trigger input.
<b>AC Line</b>	The AC power line.

 
- 6 Press **Slope** and continue pressing the softkey or turn the  entry knob to select the edge to trigger on:



Rising edge.



Falling edge.






Both rising and falling edges.


## To set up pulse width triggers

A pulse width trigger occurs when a pulse that matches the pulse definition is found in a waveform.

The width setting can be adjusted from 20 ns to 10 s.

 
- 1 Press **[Menu]**.
- 2 In the Trigger menu, press **Mode**.
- 3 Continue pressing the **Mode** softkey or turn the  entry knob to select “Pulse”.
- 4 Then, either push the  entry knob or press **Mode** again.
- 5 Press **Source** and continue pressing the softkey or turn the  entry knob to select the waveform to trigger on:

<b>CH1 - CH4</b>	The oscilloscope input channel.
<b>EXT</b>	The external trigger input.
<b>EXT/5</b>	The (5:1) attenuated external trigger input.

- 6 Press **When** and continue pressing the softkey or turn the  entry knob to select the type of pulse to trigger on:




Positive pulse greater than the width setting.



Positive pulse less than the width setting.



 Negative pulse greater than the width setting.





Negative pulse less than the width setting.

- 7 Press **Setting** and turn the  entry knob to adjust the width setting.

## To set up video triggers

Video triggering is used to trigger on fields or lines of NTSC, PAL, or SECAM standard video waveforms.

When the video trigger mode is selected, the trigger coupling is set to AC.

- 1 Press **[Menu]**.
- 2 In the Trigger menu, press **Mode**.
- 3 Continue pressing the **Mode** softkey or turn the  entry knob to select “Video”.
- 4 Then, either push the  entry knob or press **Mode** again.
- 5 Press **Polarity** to toggle between:




Normal polarity – trigger on the negative edge of the sync pulse.




Inverted polarity – trigger on the positive edge of the sync pulse.

### NOTE


Normal Polarity Sync triggers always occur on negative-going horizontal sync pulses. If the video waveform has positive-going horizontal sync pulses, use the Inverted Polarity selection.

- 6 Press **Sync** and continue pressing the softkey or turn the  entry knob to select what to trigger on:


<b>All Lines</b>	Trigger on all lines.
<b>Line Num</b>	Trigger on a selected line. If you select “Line Num”, press the following <b>Line Num</b> menu item and turn the  entry knob to select the line number.
<b>Odd Field</b>	Trigger on an odd field.
<b>Even Field</b>	Trigger on an even field.

7 Press **Standard** to toggle between:

<b>NTSC</b>	Trigger on an NTSC video waveform.
<b>PAL/ SECAM</b>	Trigger on a PAL or SECAM video waveform.

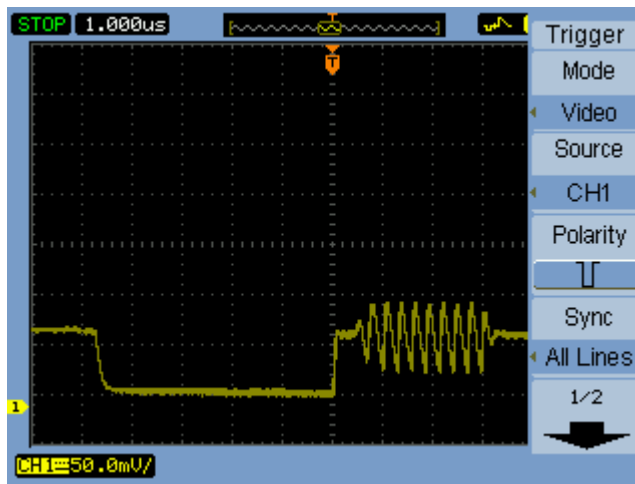

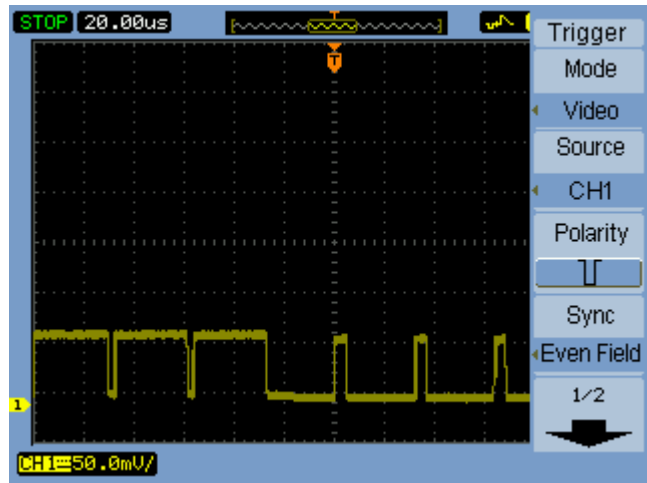


**Figure 34** Line Synchronization






**Figure 35** Field Synchronization

To set up pattern triggers

- 1 Press **[Menu]**.
- 2 In the Trigger menu, press **Mode**.
- 3 Continue pressing the **Mode** softkey or turn the  entry knob to select "Pattern".
- 4 Then, either push the  entry knob or press **Mode** again.
- 5 Press **Channel** and continue pressing the softkey or turn the  entry knob to select the input channel whose value you want to specify:

<b>CH1 - CH4</b>	The oscilloscope input channel.
<b>EXT</b>	The external trigger input.
<b>EXT/5</b>	The (5:1) attenuated external trigger input.

- 6 Press **Code** and continue pressing the softkey or turn the  entry knob to select the value for the selected channel:



<b>H</b>	Logical high value.
<b>L</b>	Logical low value.
<b>X</b>	Don't care value.
	Rising edge.
	Falling edge.

- 7 Repeat steps 5 through 6 to select the desired values for all input channels.

The oscilloscope triggers when all the values in the pattern occur at the same time.

## To set up alternate triggers

The Alternate trigger mode splits the display horizontally and lets you trigger on two, non-synchronized signals.

- 1 Press **[Menu]**.
- 2 In the Trigger menu, press **Mode**.
- 3 Continue pressing the **Mode** softkey or turn the  entry knob to select "Alternate".
- 4 Then, either push the  entry knob or press **Mode** again.
- 5 Press **Select** to select the channel to set up triggering on, either "CH1" or "CH2".

At this point, the remaining items in the Trigger menu let you set up independent triggers for the selected channel.

For each source, you can set up edge, pulse width, or video triggering. You can also specify other trigger setup options, except trigger sweep.

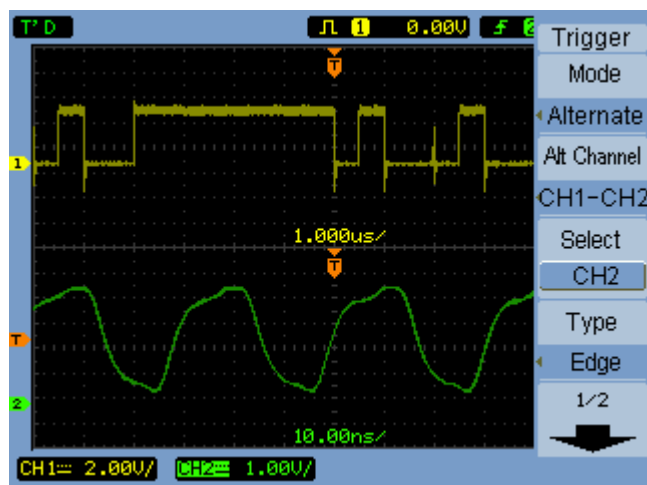



Figure 36 Alternate Triggers

## Setting Other Trigger Parameters

These are trigger system parameters that apply in all trigger modes.

### To set the trigger sweep

Trigger sweep specifies whether acquisitions occur without a trigger or only with a trigger.

- 1 Press **[Menu]**.
- 2 In the Trigger menu, press **Sweep**.
- 3 Continue pressing the **Sweep** softkey or turn the  entry knob to select one of these trigger sweep settings:

<b>Auto</b>	Acquire waveform even when no trigger occurs.
<b>Normal</b>	Acquire waveform when trigger occurs.


### To set the trigger coupling

Trigger coupling is used to filter low frequency signal components or DC offsets from the trigger path when they interfere with achieving stable triggers.

Trigger coupling is similar to channel coupling (see [page 43](#)), but it only affects the triggering system and does not change how the signal is displayed.

To set the trigger coupling:

- 1 Press **[Menu]**.
- 2 In the Trigger menu, press **Set Up**.
- 3 In the Set Up menu, press **Coupling**.

- 4 Continue pressing the the **Coupling** softkey or turn the  entry knob to select one of these trigger coupling settings:

<b>DC</b>	Sets the trigger coupling to DC.
<b>AC</b>	Sets the trigger coupling to AC – use for waveforms greater than 50 Hz.
<b>LF Reject</b>	Sets the trigger coupling to low frequency reject (10 kHz cutoff).

### To set the trigger high-frequency reject coupling

Trigger high-frequency reject coupling (100 kHz cutoff) is used to filter high frequency signal components from the trigger path when they interfere with achieving stable triggers.

To set the trigger high-frequency reject coupling:

- 1 Press **[Menu]**.
- 2 In the Trigger menu, press **Set Up**.
- 3 In the Set Up menu, press **HF Reject** to toggle between “ON” and “OFF”.




## To change the trigger sensitivity

Trigger sensitivity specifies the vertical change that must occur in order for a trigger to be recognized. In the 1000A Series oscilloscopes, you can adjust the trigger sensitivity.

For example, to reduce the influence of noise, you can lower the trigger sensitivity (by increasing the vertical change required to trigger).


To change the trigger sensitivity:

- 1** Press **[Menu]**.
- 2** In the Trigger menu, press **Set Up**.
- 3** In the Set Up menu, press **Sensitivity** and turn the  entry knob to adjust the sensitivity setting.

The trigger sensitivity can be adjusted from 0.1 div to 1 div.


## To specify a trigger holdoff

Trigger holdoff can be used to stabilize a waveform. The holdoff time is the oscilloscope's waiting period before starting a new trigger. The oscilloscope will not trigger until the holdoff time has expired.

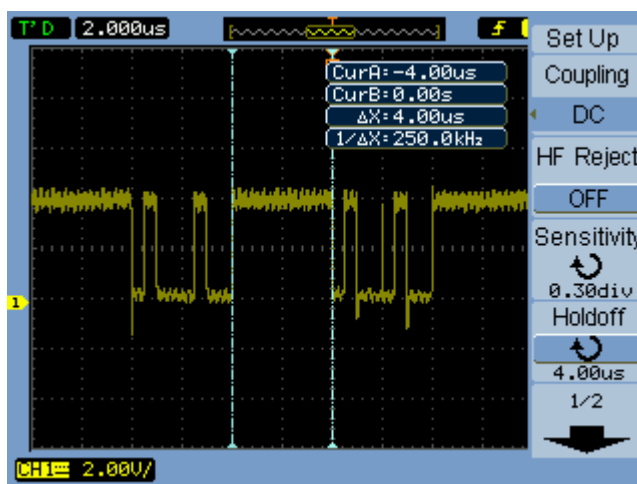

**Figure 37** Trigger Holdoff

To specify a trigger holdoff:

- 1 Press **[Menu]**.
- 2 In the Trigger menu, press **Set Up**.
- 3 In the Set Up menu, press **Holdoff** and turn the  entry knob to adjust the holdoff setting.

## To reset the trigger holdoff

- 1 In the Set Up menu, select the **Holdoff Reset** menu item to return the trigger holdoff setting to the 100 ns minimum value.

## Using the External Trigger Input

You can trigger on external inputs by selecting “EXT” or “EXT/5” (5:1 attenuated) as the trigger source in all trigger modes except Alternate.



## 4 Making Measurements

Displaying Automatic Measurements / 94

Voltage Measurements / 96

Time Measurements / 99


Counter (Frequency) / 104

Making Cursor Measurements / 105

This chapter shows how to make automatic voltage measurements, automatic time measurements, and cursor measurements.

## Displaying Automatic Measurements

You can use the **[Measure]** key to display automatic measurements. The oscilloscope has 22 automatic measurements and a hardware frequency counter (see **"Voltage Measurements"** on page 96 and **"Time Measurements"** on page 99).

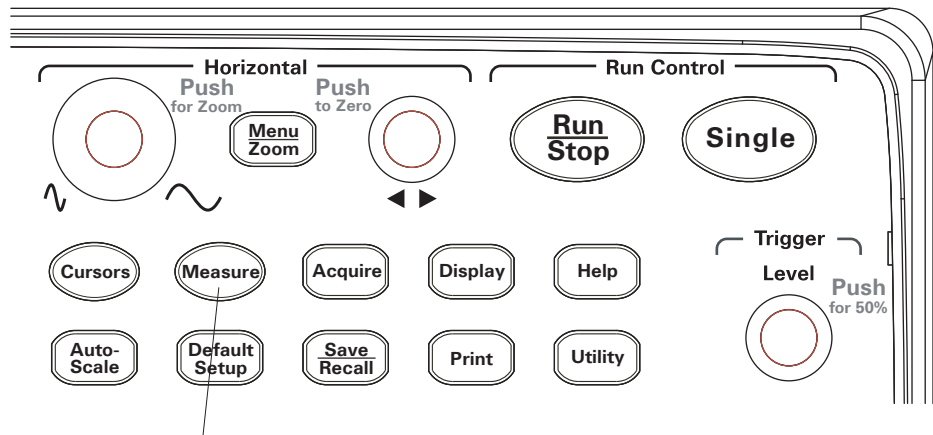

**Figure 38** [Measure] Key

To display an automatic measurement

- 1 Press **[Measure]**.
- 2 In the Measure menu, press **Source** to select the input channel on which to make the automatic measurement.
- 3 Press **Voltage** (for voltage measurements) or **Time** (for time measurements) and turn the ↻ entry knob to select the desired measurement.
- 4 Then, either push the ↻ entry knob or press **Voltage** or **Time** again to add the measurement to the bottom of the display.

If the measurement result is displayed as "\*\*\*\*\*", the measurement cannot be performed with the current oscilloscope settings.

A maximum of three measurements can be displayed at the bottom of the display. When three measurements are displayed and you add a new one, the measurements shift to the left, pushing the first measurement result off screen.

**See Also** [“To display cursors for automatic measurements”](#) on page 107.

To clear automatic measurements from the display

- 1 Press **[Measure]**.
- 2 In the Measure menu, press **Clear** to clear all automatic measurements from the display.

To display or hide all automatic measurements

- 1 Press **[Measure]**.
- 2 In the Measure menu, press **Display All** to toggle the display of all automatic measurements “ON” or “OFF”.


To select channels for delay/phase measurements

- 1 Press **[Measure]**.
- 2 In the Measure menu, press **Delay/Phase**.
- 3 In the Delay/Phase menu, press **DelayA**, **DelayB**, **PhaseA**, or **PhaseB** to select the input channel for the respective measurement.

## Voltage Measurements

There are 10 automatic voltage measurements:

- Vmax (Maximum Voltage).
- Vmin (Minimum Voltage).
- Vpp (Peak-to-Peak Voltage).
- Vtop (Top Voltage).
- Vbase (Base Voltage).
- Vamp (Amplitude Voltage =  $V_{top} - V_{base}$ ).
- Vavg (Average Voltage).
- Vrms (Root-Mean-Square Voltage).
- Overshoot.
- Preshoot.

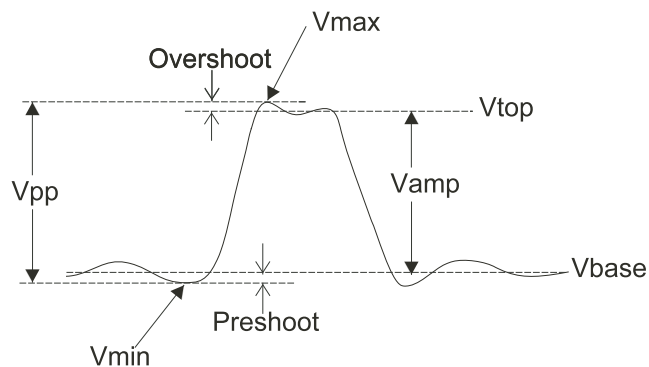

**Figure 39** Voltage Measurement Points

### Vmax (Maximum Voltage)

The maximum amplitude. The most positive peak voltage measured over the entire waveform. See [Figure 39](#) on page 96.



### V<sub>min</sub> (Minimum Voltage)

The minimum amplitude. The most negative peak voltage measured over the entire waveform. See **Figure 39** on page 96.

### V<sub>pp</sub> (Peak-to-Peak Voltage)

Peak-to-peak voltage. See **Figure 39** on page 96.

### V<sub>top</sub> (Top Voltage)

Voltage of the waveform's flat top, useful for square and pulse waveforms. See **Figure 39** on page 96.

### V<sub>base</sub> (Base Voltage)

Voltage of the waveform's flat base, useful for square and pulse waveforms. See **Figure 39** on page 96.

### V<sub>amp</sub> (Amplitude Voltage = V<sub>top</sub> - V<sub>base</sub>)

Voltage between V<sub>top</sub> and V<sub>base</sub> of a waveform. See **Figure 39** on page 96.

### V<sub>avg</sub> (Average Voltage)

The arithmetic mean over the entire waveform.

### V<sub>rms</sub> (Root-Mean-Square Voltage)

The true root-mean-square voltage over the entire waveform.

$$RMS = \sqrt{\frac{\sum_{i=1}^n x_i^2}{n}}$$

Where:

$x_i$  = value at  $i^{\text{th}}$  point.

$n$  = number of points.

## Overshoot

Defined as  $(V_{\text{max}} - V_{\text{top}}) / V_{\text{amp}}$ , useful for square and pulse waveforms. See **Figure 39** on page 96.

## Preshoot

Defined as  $(V_{\text{min}} - V_{\text{base}}) / V_{\text{amp}}$ , useful for square and pulse waveforms. See **Figure 39** on page 96.


## Time Measurements

There are 12 automatic time measurements plus the hardware frequency counter:

- Period.
- Frequency.
- Rise Time.
- Fall Time.
- + Pulse Width.
- - Pulse Width.
- + Duty Cycle.
- - Duty Cycle.
- Delay A-B, rising edges.
- Delay A-B, falling edges.
- Phase A-B, rising edges.
- Phase A-B, falling edges.

### Period

Measures the period of a waveform.

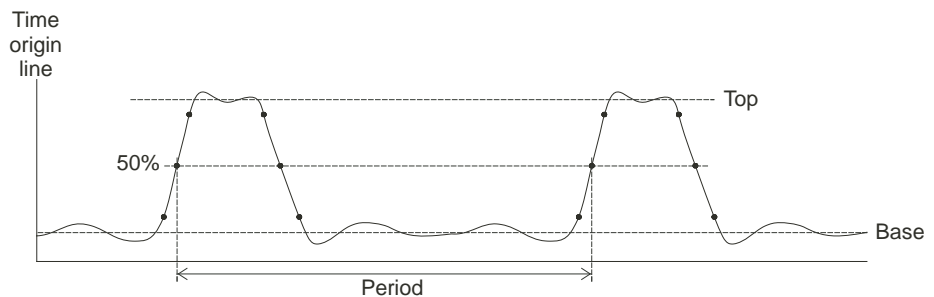


**Figure 40** Period and Frequency Measurements

## Frequency

Measures the frequency of a waveform. See [Figure 40](#) on page 99.

## Rise Time

Measures the rise time of a waveform.

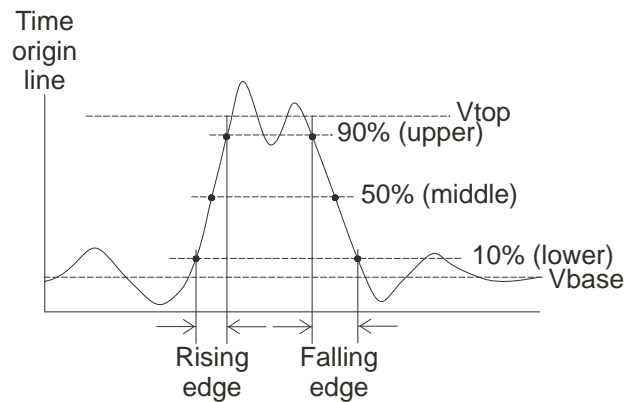



**Figure 41** Rise Time and Fall Time Measurements

## Fall Time

Measures the fall time of a waveform. See [Figure 41](#) on page 100.

## Positive Pulse Width

Measures the positive pulse width of a waveform.

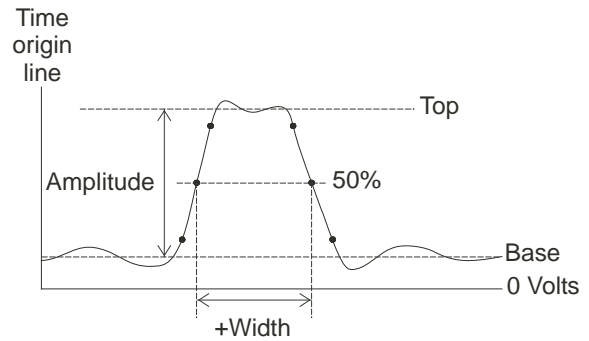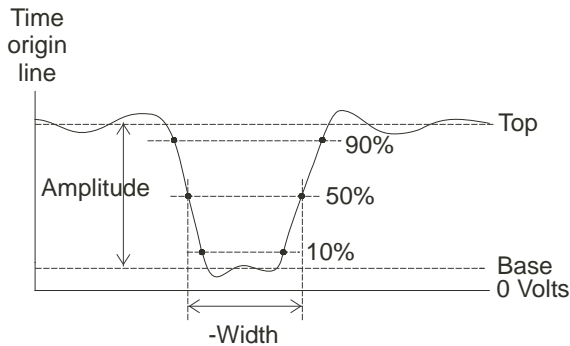

**Figure 42** Positive Pulse Width and Negative Pulse Width Measurements

## Negative Pulse Width

Measures the negative pulse width of a waveform. See [Figure 42](#) on page 101.

## Positive Duty Cycle


Measures the positive duty cycle of a waveform.

## Negative Duty Cycle

Measures the negative duty cycle of a waveform.

## Delay Between Rising Edges

Measures the delay between two waveforms using the rising edges.

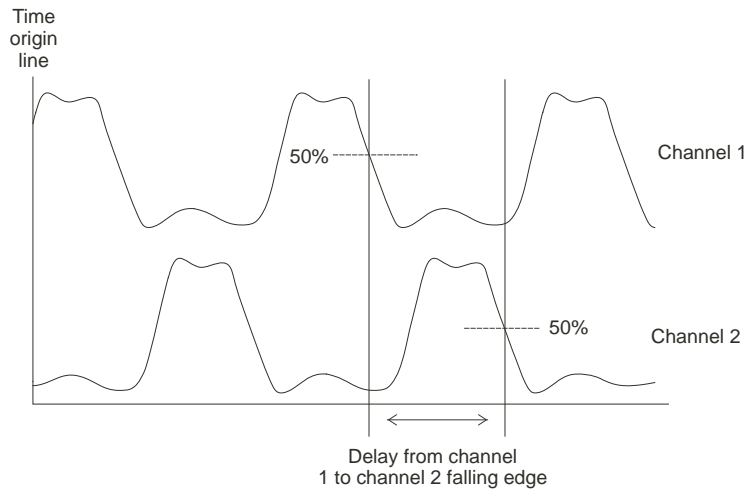

**Figure 43** Delay Measurements

## Delay Between Falling Edges


Measures the delay between two waveforms using the falling edges. See [Figure 43](#) on page 102.

## Phase Between Rising Edges

Measures the phase between two waveforms using the rising edges.

Phase is the calculated phase shift from source 1 to source 2, expressed in degrees. Negative phase shift values indicate that the rising edge of source 1 occurred after the rising edge of source 2.

$$\text{Phase} = \frac{\text{Delay}}{\text{Source 1 Period}} \times 360^\circ$$

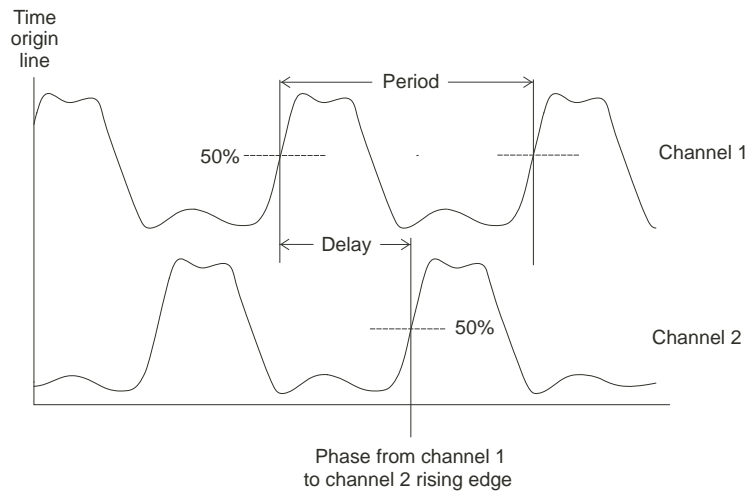

**Figure 44** Phase Measurements

## Phase Between Falling Edges

Measures the phase between two waveforms using the falling edges. See [Figure 44](#) on page 103.

## Counter (Frequency)

The 1000A Series oscilloscopes have an integrated 6-digit hardware frequency counter.

The counter operates on the currently selected trigger source and can measure frequencies from 5 Hz to the bandwidth of the oscilloscope.

The counter uses the trigger comparator to count the number of cycles within a period of time (known as the gate time), so the trigger level must be set correctly.

The frequency counter is not available in the Alternate trigger mode.

To turn the hardware frequency counter on or off:


- 1** Press **[Measure]**.
- 2** In the Measure menu, press **Counter** to toggle the frequency counter display “ON” or “OFF”.



## Making Cursor Measurements

You can use the **[Cursors]** front panel key to select between these cursor measurement modes:

<b>Manual</b>	Gives you manually adjustable, parallel cursors for measuring time or amplitude between cursors.
<b>Track</b>	Gives you one or two manually adjustable, cross-hair cursors that track the points of a waveform, measuring time and amplitude.
<b>Auto</b>	Gives you automatically adjusted cursors for the most recently displayed voltage or time measurement.
<b>OFF</b>	Cursors are tuned off.

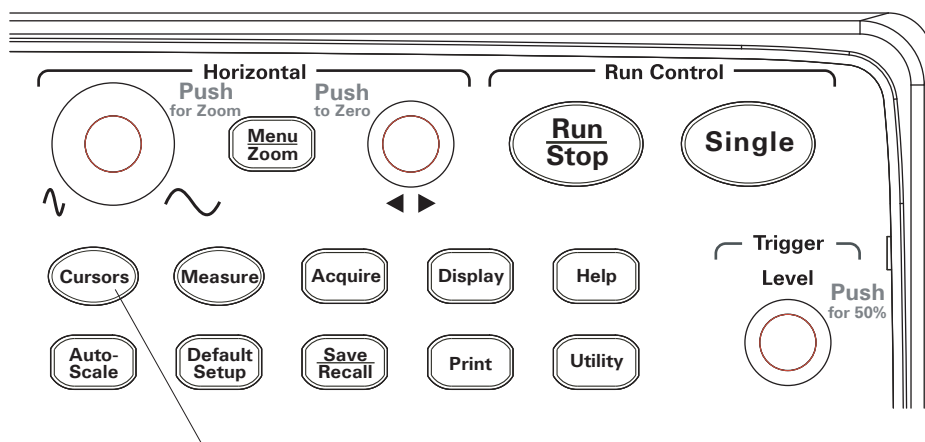

**Figure 45** [Cursors] Key

### To use manually adjustable cursors


You can set up two parallel, manually adjustable cursors to make amplitude (vertical) or time (horizontal) measurements on a selected waveform.

- 1 Press **[Cursors]**.
- 2 In the Cursors menu, press **Mode**.




**3** Continue pressing the **Mode** softkey or turn the  entry knob to select “Manual”.

**4** Press **Type** to toggle between:

<b>Time</b>	To use cursors to measure time parameters.
<b>Amplitude</b>	To use cursors to measure amplitude parameters.

**5** Press **Source**, and continue pressing the softkey or turn the  entry knob to select the channel or math waveform on which to make the measurement.

**6** To adjust the cursors:

- Press **CurA** and turn the  entry knob to adjust the “A” cursor.
- Press **CurB** and turn the  entry knob to adjust the “B” cursor.
- Press **CurA** and **CurB** and turn the  entry knob to adjust both cursors at the same time.

The cursor values displayed are:


- CurA.
- CurB.
- $\Delta X$  or  $\Delta Y$  – difference between CurA and CurB values.
- $1/\Delta X$  – when measuring time parameters, shows the frequency associated with the time period.


## To use tracking cross-hair cursors




You can set up one or two manually adjustable, tracking cross-hair cursors to make amplitude (vertical) and time (horizontal) measurements at different points of a selected channel’s waveform.

**1** Press [**Cursors**].

**2** In the Cursors menu, press **Mode**.

**3** Continue pressing the **Mode** softkey or turn the  entry knob to select “Track”.

**4** Press **Cursor A**, and continue pressing the softkey or turn the  entry knob to select the channel on which to make the measurement (or “None” to turn off the cursor).

- 5 Press **Cursor B**, and continue pressing the softkey or turn the  entry knob to select the channel on which to make the measurement (or “None” to turn off the cursor).
- 6 To adjust the cursors:
  - Press **CurA** and turn the  entry knob to adjust the “A” cursor.
  - Press **CurB** and turn the  entry knob to adjust the “B” cursor.

The A cursor values displayed are:

- A->X
- A->Y.


The B cursor values displayed are:

- B->X.
- B->Y

If both A and B cursors are used, these values are also displayed:

- $\Delta X$  – difference between CurA and CurB time values.
- $1/\Delta X$  – shows the frequency associated with the time value difference.
- $\Delta Y$  – difference between CurA and CurB amplitude values.

## To display cursors for automatic measurements

- 1 Press [**Cursors**].
- 2 In the Cursors menu, press **Mode**.
- 3 Continue pressing the **Mode** softkey or turn the  entry knob to select “Auto”.

In the “Auto” cursors mode:

- Cursors appear for the most recently displayed automatic measurement (see **“To display an automatic measurement”** on page 94).
- No cursors are displayed if there are no automatic measurements.



## 5 Saving, Recalling, and Printing Data

Saving and Recalling Data / 110


Using the Disk Manager / 114

Printing Screens / 119

This chapter describes how to save, recall, and print data.

The oscilloscope has internal, nonvolatile memory locations for saving and recalling waveforms and setups.


The oscilloscope also has rectangular USB host ports on its front and back panel to which you can connect a USB drive (for saving and recalling data).

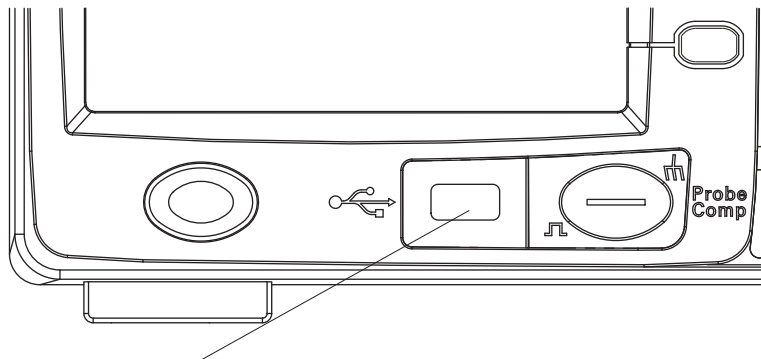

**Figure 46** USB Host Port on Front Panel

## Saving and Recalling Data

Using the oscilloscope's **[Save/Recall]** key, you can save and recall oscilloscope waveforms and setups, and you can save oscilloscope display screens and data.

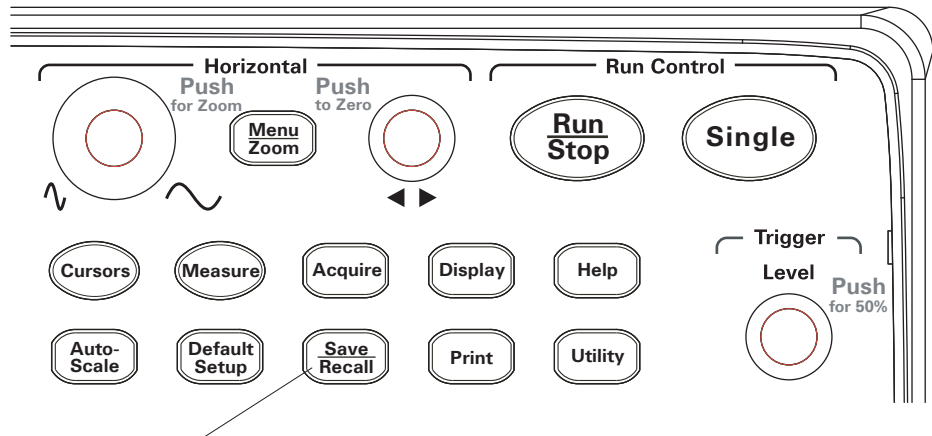


**Figure 47** [Save/Recall] Key

When turning off the oscilloscope after saving or recalling data from an external USB drive, allow at least five seconds for the data transfer to complete.


### To save and recall waveforms

You can save/recall oscilloscope waveforms and setups to/from 10 internal, nonvolatile memory locations in the oscilloscope.

You can also save/recall waveforms and setups to an external USB drive when it is connected to a rectangular USB host port.

- 1 Press **[Save/Recall]**.
- 2 In the Storage menu, press **Storage**.
- 3 Continue pressing the **Storage** softkey or turn the  entry knob to select "Waveform".

To save to or recall from internal storage:

- a** Press **Internal**.
- b** In the Internal menu, press **Location**.
- c** Continue pressing the **Location** softkey or turn the  entry knob to select the desired internal storage location.  
The “(N)” suffix shows that nothing has been saved to the location. The “(S)” suffix shows waveforms have been previously saved to the location.
- d** Press **Save** or **Recall**.


To save to or recall from external storage (when a USB drive is connected to the front panel USB host port):

- a** Press **External**.
- b** Use the disk manager dialog to navigate to the folder where you want to save the file or to select the file you want to load (see **“To navigate the directory hierarchy”** on page 115).
- c** In the External menu:  
To save the waveform, press **New File**, enter the filename (see **“To edit folder/file names”** on page 116), and press **Save**.  
To load the selected waveform (.wfm file), press **Recall**.


## To save and recall oscilloscope setups

You can save/recall oscilloscope setups to/from 10 internal, nonvolatile memory locations in the oscilloscope.

You can also save/recall setups to an external USB drive when it is connected to the front panel USB host port.

- 1** Press [**Save/Recall**].
- 2** In the Storage menu, press **Storage**.
- 3** Continue pressing the **Storage** softkey or turn the  entry knob to select “Setups”.

To save to or recall from internal storage:


- a** Press **Internal**.
- b** In the Internal menu, press **Location**.
- c** Continue pressing the **Location** softkey or turn the  entry knob to select the desired internal storage location.  
The “(N)” suffix shows that nothing has been saved to the location. The “(S)” suffix shows waveforms have been previously saved to the location.
- d** Press **Save** or **Recall**.

To save to or recall from external storage (when a USB drive is connected to the front panel USB host port):

- a** Press **External**.
- b** Use the disk manager dialog to navigate to the folder where you want to save the file or to select the file you want to load (see **“To navigate the directory hierarchy”** on page 115).
- c** In the External menu:  
To save the setup, press **New File**, enter the filename (see **“To edit folder/file names”** on page 116), and press **Save**.  
To recall the selected setup (.stp file), press **Recall**.

## To save screens to BMP or PNG format files

You can save oscilloscope display screens (in BMP or PNG format) to an external USB drive when it is connected to a rectangular USB host port.

- 1** Press **[Save/Recall]**.
- 2** In the Storage menu, press **Storage**.
- 3** Continue pressing the **Storage** softkey or turn the  entry knob to select one of:

<b>8-Bitmap</b>	8-bit BMP format.
<b>24-Bitmap</b>	24-bit BMP format.
<b>PNG</b>	Portable Network Graphics format.


- 4** To specify whether oscilloscope parameters be saved along with the screen, press **Para Save** to toggle between on and off.



- 5 Press **External**.
- 6 Use the disk manager dialog to navigate to the folder where you want to save the file (see **"To navigate the directory hierarchy"** on page 115).
- 7 In the External menu, press **New File**, enter the filename (see **"To edit folder/file names"** on page 116), and press **Save**.

## To save data to CSV format files

You can save captured data (in CSV, comma-separated value format) to an external USB drive when it is connected to the front panel USB host port.

- 1 Press **[Save/Recall]**.
- 2 In the Storage menu, press **[Storage]**.
- 3 Continue pressing the **Storage** softkey or turn the  entry knob to select "CSV".
- 4 To specify the amount of data to be saved, press **Data Depth** to toggle between "Displayed" and "Maximum".
- 5 To specify whether oscilloscope parameters be saved along with the data, press **Para Save** to toggle between "ON" and "OFF".
- 6 Press **External**.
- 7 Use the disk manager dialog to navigate to the folder where you want to save the file (see **"To navigate the directory hierarchy"** on page 115).
- 8 In the External menu, press **New File**, enter the filename (see **"To edit folder/file names"** on page 116), and press **Save**.


## Using the Disk Manager

When a USB drive is connected to the front panel USB host port, you can use the Disk Manager to select and name files and folders.

To access the Disk Mana. menu:

- 1 Press **[Save/Recall]**.
- 2 In the Storage menu, press **Disk Mana.**

The Disk Manager screen appears. It looks similar to:

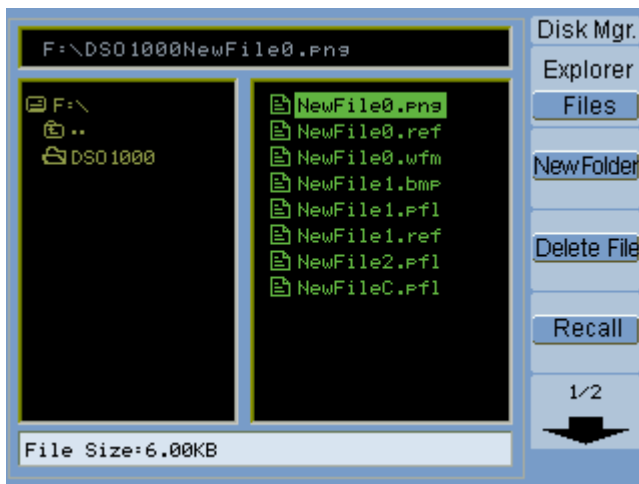

**Figure 48** Disk Manager

## To switch between files, path, and directory panes



- 1 In the Disk Mana. menu ([**Save/Recall**] > **Disk Mana.**), press **Explorer** to switch between:

<b>Files</b>	Places the cursor in the files pane.
<b>Path</b>	Places the cursor in the path pane.
<b>Directories</b>	Places the cursor in the directories pane.

In each of these panes, the  entry knob is used to select items.

## To navigate the directory hierarchy


In the directory pane (see "**To switch between files, path, and directory panes**" on page 115):

- Turn the  entry knob to select folders.
- Push the  entry knob to navigate into the selected folder.

## To create new folders





- 1 In the Disk Mana. menu ([**Save/Recall**] > **Disk Mana.**), press **New Folder**.
- 2 Use the folder/file naming dialog to enter the folder name. See "**To edit folder/file names**" on page 116.
- 3 In the New Folder menu, press **Save**.

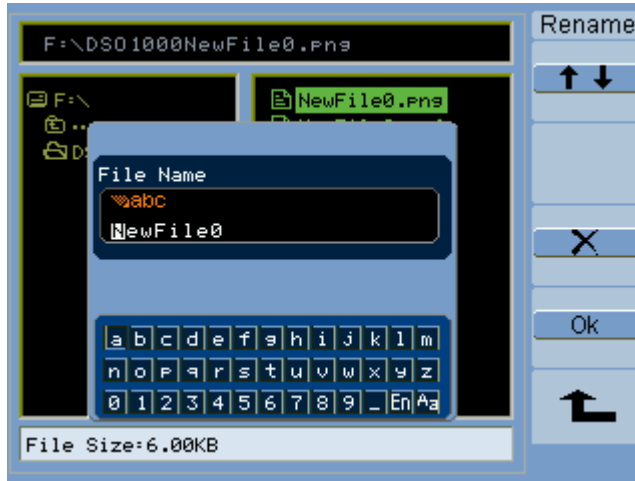To edit folder/file names




**Figure 49** Editing Folder/File Names in Disk Manager

 In the folder/file name edit dialog:

- Select the  menu item to move the cursor between fields in the dialog.
- Turn the  entry knob to select:
  - A character in the filename (when the cursor is in the name field).
  - A key (when the cursor is in the keypad field).
- When the cursor is in the keypad field, push the  entry knob to:
  - Choose an alphanumeric character for the name (and move to the next name character).
  - On “Aa”, change from upper to lower case characters on the keypad.
  - On “En”, change from single-byte to multi-byte character entry fields.
- Select the  menu item to delete a character from the name.


## To delete folders

In the directory pane (see [“To switch between files, path, and directory panes”](#) on page 115):

- 1 Turn the  entry knob to select folders.
- 2 Press **Del Folder** to delete the selected folder.
- 3 Press **Ok** to confirm the deletion.


## To rename folders

In the directory pane (see [“To switch between files, path, and directory panes”](#) on page 115):

- 1 Turn the  entry knob to select the folder.
- 2 Press **Rename**.
- 3 Use the folder/file naming dialog to edit the folder name. See [“To edit folder/file names”](#) on page 116.
- 4 In the Rename menu, press **Ok**.


## To delete files

In the files pane (see [“To switch between files, path, and directory panes”](#) on page 115):

- 1 Turn the  entry knob to select the file.
- 2 Press **Delete File** to delete the selected file.
- 3 Press **Ok** to confirm the deletion.


## To recall files

In the files pane (see [“To switch between files, path, and directory panes”](#) on page 115):

- 1 Turn the  entry knob to select the file.
- 2 Press **Recall** to load the selected file.

### To rename files

In the files pane (see **"To switch between files, path, and directory panes"** on page 115):

- 1 Turn the  entry knob to select the file.
- 2 Press **Rename**.
- 3 Use the folder/file naming dialog to edit the file name. See **"To edit folder/file names"** on page 116.
- 4 In the Rename menu, press **Ok**.


### To display disk information

- 1 In the Disk Mana. menu ([**Save/Recall**] > **Disk Mana.**), press **Disk info**.


## Printing Screens

You can print oscilloscope display screens to:

- A PictBridge compliant printer connected to the (square) USB device port on the oscilloscope's back panel.

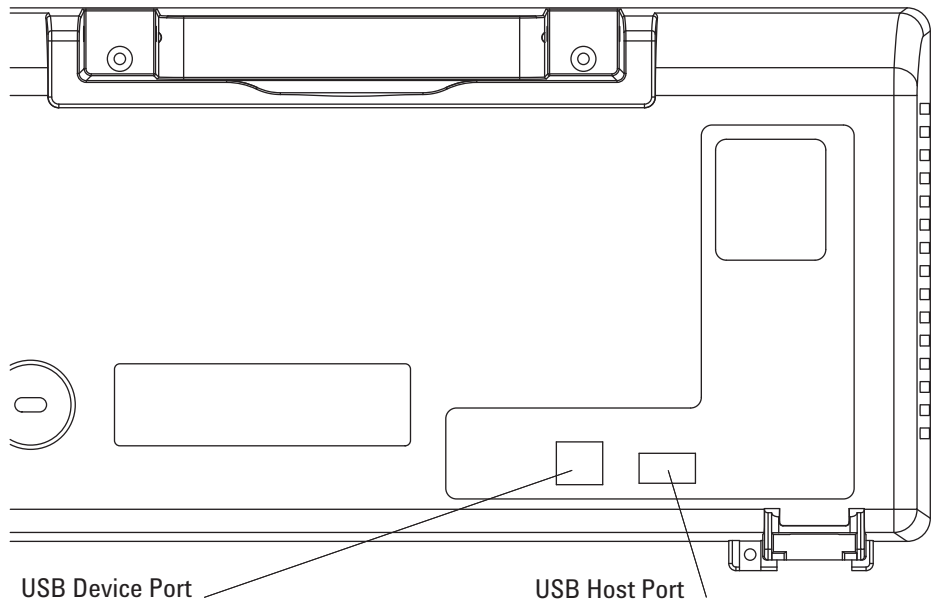

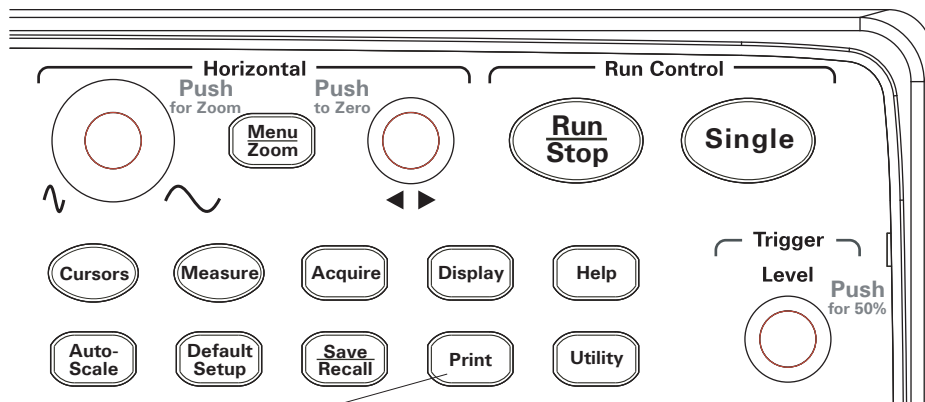

 

**Figure 50** USB Ports on Back Panel



**Figure 51** [Print] Key Location

## To choose a PictBridge printer

You can print to a PictBridge compliant printer connected to the (square) USB device port on the oscilloscope's back panel.

- 1 Press **[Print]**.
- 2 Press **Paper Size** and turn the  entry knob to select the desired paper size.
- 3 Press **File Type** and turn the  entry knob to select the desired file type.
- 4 Press **Copies** and turn the  entry knob to select the desired number of copies.
- 5 Press **Print Quality** and turn the  entry knob to select the desired print quality.
- 6 Press **Date Print** to turn date printing on the image "ON" or "OFF".

### NOTE

The back panel's (square) USB device port is also used for remote programming control of the oscilloscope, so the PictBridge compliant printing and remote programming features cannot be used at the same time.

For more information on remote programming, see the *Keysight 1000A Series Oscilloscopes Programmer's Guide*.

If there are problems when connecting the USB device port to a PictBridge compliant printer or remote computer, see **"To select the USB device port function"** on page 131.



## To print with inverted screen colors

- 1 Press **[Print]**.
- 2 In the Print menu, press **Inverted** to choose between:

<b>ON</b>	This option changes the black background of display image to white. This can be used to reduce the amount of black ink that takes to print the oscilloscope display images.
<b>OFF</b>	This option prints the display image as shown on the screen.

## To choose color or grayscale printing

- 1 Press **[Print]**.
- 2 Press **Palette** to choose between:

<b>Grayscale</b>	When this option is selected, the traces are printed in shades of gray rather than in color.
<b>Color</b>	When this option is selected, the traces are printed in color.

## To copy a screen to the printer


- 1 Press **[Print]**.
- 2 In the Print menu, press the **Print** softkey.



## 6 Oscilloscope Utility Settings

Displaying System Information / 124  
Turning Sound ON or OFF / 124  
Setting and Displaying the Date and Time / 124  
Setting the Language (Menu and Help) / 125  
Performing Mask Tests / 126  
Setting Preferences / 131  
Running Self-Calibration / 132

This chapter describes oscilloscope settings found in the Utilities menu.

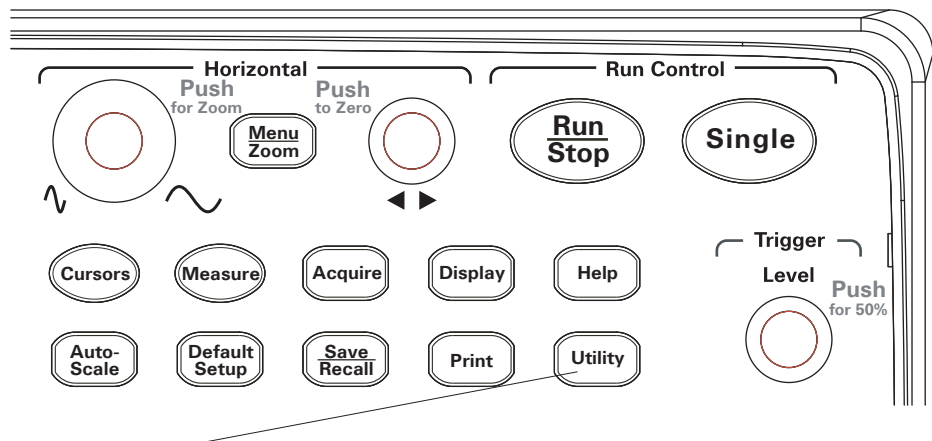

**Figure 52** [Utility] Key

## Displaying System Information

To display the oscilloscope's system information:

- 1 Press **[Utility]**.
- 2 In the Utilities menu, press **System Info**.

The system information contains:

- Model number.
- Serial number.
- Software version.
- Installed module information.

To exit, press **Run/Stop**.

## Turning Sound ON or OFF

To turn the oscilloscope's beeper sound on or off:

- 1 Press **[Utility]**.
- 2 In the Utilities menu, press **Sound** to toggle between on and off.



Appears on the menu when sound is off; press **Sound** to run the test.





Appears on the menu when sound is on; press **Sound** to stop the test

## Setting and Displaying the Date and Time


To set and display the oscilloscope's date and time:

- 1 Press **[Utility]**.
- 2 In the Utilities menu, press **Date/Time**.
- 3 In the Date/time menu, press:

<b>Display</b>	To turn the date/time display “ON” or “OFF”. Dates and times on the display can be useful when recording mask test output waveforms over long periods of time (see <b>“Recording/Playing-back Waveforms”</b> on page 74).
	To move the cursor between the date and time settings.
	To move the cursor between fields within the date or time.
<b>Ok</b>	To apply the date/time setting.

## Setting the Language (Menu and Help)

To set the language used in menus and quick help:

- 1 Press **[Utility]**.
- 2 In the Utilities menu, press **Language**.
- 3 Continue pressing the **Language** softkey or turn the  entry knob to select the desired language.

You can select from the following languages:

- Simplified Chinese.
- Traditional Chinese.
- Korean.
- Japanese.
- English.
- German.
- French.
- Portuguese.
- Spanish.
- Italian.
- Russian.

If quick help is unavailable in a particular language, English is displayed.

## Performing Mask Tests

The mask test function monitors waveform changes by comparing the waveform to a predefined mask.

### NOTE

The Mask Test function is not available in the X-Y horizontal timebase mode.

---


To access the Mask Test menu:

- 1 Press **[Utility]**.
- 2 In the Utilities menu, press **Mask Test**.

To enable/disable mask tests

- 1 In the Mask Test menu (**[Utility]** > **Mask Test**), press **Enable Test** to toggle between OFF and ON.

To select the source channel for mask tests

- 1 In the Mask Test menu (**[Utility]** > **Mask Test**), press **Source**.
- 2 Continue pressing the **Source** softkey or turn the  entry knob to select the desired input channel.

## To run/stop a mask test

- 1 In the Mask Test menu ([Utility] > **Mask Test**), press **Operate** to run or stop the test.



Appears on the menu when the test is stopped; press **Operate** to run the test.



Appears on the menu when the test is running; press **Operate** to stop the test

## To turn on/off the mask test message display

- 1 In the Mask Test menu ([Utility] > **Mask Test**), press **Msg Display** to toggle between OFF and ON.

The message display shows the failed, passed, and total number of waveforms.





**Figure 53** Mask Test Display

## To set the mask test output condition

- 1 In the Mask Test menu ([Utility] > **Mask Test**), press **Output**.

2 Continue pressing the **Output** softkey to select the desired output condition:

<b>Fail</b>	A mask failure sets the output.
<b>Fail + </b>	A mask failure sets the output and causes a beep.
<b>Pass</b>	A passing waveform sets the output.
<b>Pass + </b>	A passing waveform sets the output and causes a beep.

The output condition can be used to stop a running mask test or as a source for the waveform recording function (see **“Recording/Playing-back Waveforms”** on page 74).

### To stop a mask test on the output condition

To turn on/off stopping the mask test when the output condition occurs:

- 1 In the Mask Test menu ([Utility] > **Mask Test**), press **Stop On Output** to toggle between OFF and ON.

### To set up masks

You can create masks by adding horizontal and vertical margins to a signal. You can save and load masks from internal memory or an external USB drive. And you can export and import masks from an external USB drive.

To access the Mask menu:


- 1 Press [Utility].
- 2 In the Utilities menu, press **Mask Test**.
- 3 In the Mask Test menu, press **MaskSetting**.






**Figure 54** Mask Test Mask Setting

To adjust a mask's horizontal failure margin

- 1 In the Mask menu ([Utility] > **Mask Test** > **MaskSetting**), press **X Mask**.
- 2 Turn the  entry knob to adjust the horizontal failure margin.

The margin can be set from 0.04 div to 4.00 div.

To adjust a mask's vertical failure margin

- 1 In the Mask menu ([Utility] > **Mask Test** > **MaskSetting**), press **Y Mask**.
- 2 Turn the  entry knob to adjust the vertical failure margin.

The margin can be set from 0.04 div to 4.00 div.

To create a mask using the failure margin settings

- 1 In the Mask menu ([Utility] > **Mask Test** > **MaskSetting**), press **Create Mask**.

### To select internal/external mask storage location

- 1 In the Mask menu ([Utility] > Mask Test > MaskSetting), press **Location** to toggle between:

<b>Internal</b>	Masks are saved and loaded from oscilloscope internal memory.
<b>External</b>	Masks are saved, loaded, exported, and imported from an external USB drive.

### To save a mask

- 1 In the Mask menu ([Utility] > Mask Test > MaskSetting), press **Save**.
- 2 If the External mask storage location has been selected, use the Disk Manager to name and save the mask file. See “Using the Disk Manager” on page 114.

### To recall a mask

- 1 In the Mask menu ([Utility] > Mask Test > MaskSetting), press **Recall**.
- 2 If the External mask storage location has been selected, use the Disk Manager to select and load the mask file. See “Using the Disk Manager” on page 114.

### To export/import masks

- 1 Because you can only export and import masks from an external drive, select the External mask location. See “To select internal/external mask storage location” on page 130.
- 2 In the Mask menu ([Utility] > Mask Test > MaskSetting), press **Imp./Exp..**
- 3 Use the Disk Manager to select the file and import or export the mask. See “Using the Disk Manager” on page 114.

#### NOTE

When importing a mask while the **Location** is **Internal** or when importing or recalling a mask while the **Location** is **External**, the mask is imported or recalled to internal memory. To activate the mask, you must set the **Location** to **Internal**, then **Recall** from internal memory.

# Setting Preferences


The oscilloscope’s Preference menu lets you set screen saver, expand reference, and screen persistence options.

To access the Preference menu:

- 1 Press **[Utility]**.
- 2 In the Utilities menu, press **Preference**.

## To set up the screen saver

To set up the screen saver:

- 1 In the Preference menu (**[Utility]** > **Preference**), press **Screen saver**.
- 2 Continue pressing the **Screen saver** softkey or turn the  entry knob to select the desired time or to turn the screen saver off.

Using the screen saver can extend the life of the LCD backlight.

## To select the vertical scale reference level

When changing the vertical scale of a signal on the display, the expansion (or contraction) takes place about the selected reference level.

To set the expand reference level:

- 1 In the Preference menu (**[Utility]** > **Preference**), press **Expand Refer.** to toggle between:

<b>Ground</b>	Vertical scale changes take place about the signal ground (ground position remains at same display location).
<b>Center</b>	Vertical scale changes take place about the center of the display.

See Also **“To adjust the vertical scale”** on page 41.

## To select the USB device port function

The (square) USB device port on the oscilloscope’s back panel can be used for:

- Connecting to a PictBridge compliant printer.
- Remote programming control of the oscilloscope.

Normally, the USB device port auto-detects the type of host that is connected. However, if there are auto-detect problems, you can manually choose the type of host that is (or will be) connected.

To select the USB device port function:

- 1 In the Preference menu ([Utility] > **Preference**), press **USB Device** to toggle between:

<b>Auto Detect</b>	Lets the USB device port auto-detect the type of host that is connected.
<b>Computer</b>	Specifies the that the USB device port will be connected to a computer host.
<b>PictBridge</b>	Specifies the that the USB device port will be connected to a PictBridge compliant printer host.

# Running Self-Calibration

The automatic calibration routine adjusts the internal circuitry of the oscilloscope for the best measurement accuracy.

The automatic calibration should be run when the ambient temperature changes by 5 °C or more.

## NOTE

Before performing the automatic calibration, let the oscilloscope warm-up at least 30 minutes.

To run the oscilloscope's self-calibration:

- 1 Press **[Utility]**.
- 2 In the Utilities menu, press **Self-Cal**.
- 3 Follow the instructions on the Calibration screen.



**Figure 55** Calibration Screen



# 7 Specifications and Characteristics

Environmental Conditions / 136

Measurement Category / 137

Specifications / 138

Characteristics / 139

This chapter describes the 1000A Series oscilloscopes' specifications and characteristics.

## Environmental Conditions

### Overvoltage Category

This product is intended to be powered by MAINS that comply to Overvoltage Category II, which is typical of cord-and-plug connected equipment.

### Pollution Degree

The 1000A Series oscilloscope may be operated in environments of Pollution Degree 2 (or Pollution Degree 1).

### Pollution Degree Definitions

Pollution Degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence. Example: A clean room or climate controlled office environment.

Pollution Degree 2. Normally only dry non-conductive pollution occurs. Occasionally a temporary conductivity caused by condensation may occur. Example: General indoor environment.

Pollution Degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. Example: Sheltered outdoor environment.



## Measurement Category

The 1000A Series oscilloscope are not intended to be used for measurements in Measurement Category II, III, or IV.

### Measurement Category Definitions

The "Not rated for CAT II, III, IV" measurement category is for measurements performed on circuits not directly connected to MAINS. Examples are measurements on circuits not derived from MAINS, and specially protected (internal) MAINS derived circuits. In the latter case, transient stresses are variable; for that reason, the transient withstand capability of the equipment is made known to the user.

Measurement category II is for measurements performed on circuits directly connected to the low voltage installation. Examples are measurements on household appliances, portable tools and similar equipment.

Measurement category III is for measurements performed in the building installation. Examples are measurements on distribution boards, circuit-breakers, wiring, including cables, bus-bars, junction boxes, switches, socket-outlets in the fixed installation, and equipment for industrial use and some other equipment, for example, stationary motors with permanent connection to the fixed installation.

Measurement category IV is for measurements performed at the source of the low-voltage installation. Examples are electricity meters and measurements on primary overcurrent protection devices and ripple control units.

### Maximum Input Voltages

**CAUTION**

Maximum input voltage for analog inputs:

- 300 Vrms, 400 Vpk

**CAUTION**

When measuring voltages over 30 V, use a 10:1 probe.

# Specifications

**NOTE**

All specifications are warranted. Specifications are valid after a 30-minute warm-up period and  $\pm 5^{\circ}\text{C}$  from last calibration temperature.

**Table 5** Specifications

Name	Value
Bandwidth (-3 dB) <sup>1</sup> :	DSO1024A, DSO1022A: 200 MHz DSO1014A, DSO1012A: 100 MHz DSO1004A, DSO1002A: 60 MHz
DC vertical gain accuracy:	2 mV/div to 5 mV/div: $\pm 4.0\%$ full scale 10 mV/div to 5 V/div: $\pm 3.0\%$ full scale
Timebase accuracy:	$\pm 50$ ppm from $0^{\circ}\text{C}$ to $30^{\circ}\text{C}$ $\pm 50$ ppm + 2 ppm per $^{\circ}\text{C}$ from $30^{\circ}\text{C}$ to $45^{\circ}\text{C}$ + 5 ppm * (years since manufacture)
Trigger sensitivity Ch 1, 2, 3, 4 (DC coupling):	$\geq 5$ mV/div: 1 div from DC to 10 MHz, 1.5 div from 10 MHz to full bandwidth $< 5$ mV/div: 1 div from DC to 10 MHz, 1.5 div from 10 MHz to 20 MHz
<sup>1</sup> 20 MHz when vertical scale is set to $< 5$ mV (1X probe attenuation).	

## Characteristics

### NOTE

All characteristics are the typical performance values and are not warranted. Characteristics are valid after a 30-minute warm-up period and  $\pm 5^\circ\text{C}$  from last calibration temperature.

**Table 6** Acquisition System Characteristics

Name	Typical Value
Max sample rate:	2 GSa/s half channel <sup>2</sup> , 1 GSa/s each channel
Memory depth:	20 kpts half channel <sup>2</sup> , 10 kpts each channel
Vertical resolution:	8 bits
Peak detection:	4 ns
Averaging:	Selectable from 2, 4, 8, 16, 32, 64, 128, or 256
Sequence:	Selectable 1 to 800 acquisition frames can be recorded and played back.
Interpolation:	Sin(x)/x
<sup>2</sup> Half channel is when only one channel of channel pair 1-2 is turned on, or one channel of channel pair 3-4 is turned on.	

**Table 7** Vertical System Characteristics

Name	Typical Value
Oscilloscope channels:	DSO1xx2A: Ch 1 and 2 simultaneous acquisition DSO1xx4A: Ch 1, 2, 3, and 4 simultaneous acquisition
Bandwidth ( $-3\text{dB}$ ) <sup>1, 3</sup> :	DSO102xA: DC to 200 MHz DSO101xA: DC to 100 MHz DSO100xA: DC to 60 MHz
<sup>1</sup> 20 MHz when vertical scale is set to $< 5\text{ mV}$ (1X probe attenuation).	
<sup>3</sup> Denotes warranted specifications, all others are typical. Specifications are valid after a 30-minute warm-up period and $\pm 10^\circ\text{C}$ from firmware calibration temperature.	

**Table 7** Vertical System Characteristics (continued)

Name	Typical Value
AC coupled <sup>1</sup> :	DSO102xA: 5 Hz to 200 MHz DSO101xA: 5 Hz to 100 MHz DSO100xA: 5 Hz to 60 MHz
Calculated rise time (= 0.35/bandwidth in GHz):	DSO102xA: 1.8 ns DSO101xA: 3.5 ns DSO100xA: 5.8 ns
Range:	2 mV/div to 10 V/div (1 M $\Omega$ )
Maximum Input:	Maximum input voltage for analog inputs: ▪ 300 Vrms, 400 Vpk
Offset Range:	$\pm 2$ V on ranges <500 mV/div; $\pm 40$ V on ranges 500 mV/div to 5 V/div;
Dynamic range:	$\pm 6$ div
Input impedance:	1 M $\Omega \pm 1\%$    18 $\pm 3$ pF
Coupling:	AC, DC, ground
BW limit:	20 MHz selectable
DC vertical gain accuracy <sup>3</sup> :	2 mV/div to 5 mV/div: $\pm 4.0\%$ full scale 10 mV/div to 5 V/div: $\pm 3.0\%$ full scale
Channel-to-channel isolation:	DC to max band width >40 dB
Noise peak-to-peak:	3% full scale or 4.5 mV, whichever is greater
<sup>1</sup> 20 MHz when vertical scale is set to < 5 mV (1X probe attenuation).	
<sup>3</sup> Denotes warranted specifications, all others are typical. Specifications are valid after a 30-minute warm-up period and $\pm 10^\circ$ C from firmware calibration temperature.	

**Table 8**     Horizontal System Characteristics

Name	Typical Value
Range:	DSO102xA: 1 ns/div to 50 s/div DSO101xA: 2 ns/div to 50 s/div DSO100xA: 5 ns/div to 50 s/div
Timebase accuracy <sup>3</sup> :	±50 ppm from 0 °C to 30 °C ±50 ppm + 2 ppm per °C from 30 °C to 45 °C + 5 ppm * (years since manufacture)
Vernier:	1-2-5 increments when off, 1% minor increments between major settings when on.
Modes:	Main, Zoom, Roll, XY
XY:	Band width: Max band width
<sup>3</sup> Denotes warranted specifications, all others are typical. Specifications are valid after a 30-minute warm-up period and ±10° C from firmware calibration temperature	

**Table 9** Trigger System Characteristics

Name	Typical Value
Sources:	DSO1xx2A: Ch 1, 2, line, ext, ext/5 DSO1xx4A: Ch 1, 2, 3, 4, line, ext, ext/5
Modes (sweep):	Auto, Normal (triggered), single
Holdoff time:	~100 ns to 1.5 s
Selections:	Edge, pulse width, video, pattern, alternate
AutoScale:	Finds and displays all active channels, sets edge trigger mode on highest-numbered channel, sets vertical sensitivity on channels, time base to display ~2.0 periods. Requires minimum voltage > 20 mVpp, 1% duty cycle and minimum frequency > 50 Hz.
Coupling:	AC (~10 Hz), DC, HF reject, and LF reject
Sensitivity Ch 1, 2, 3, 4 (DC coupling) <sup>3</sup> :	≥ 5 mV/div: 1 div from DC to 10 MHz, 1.5 div from 10 MHz to full bandwidth < 5 mV/div: 1 div from DC to 10 MHz, 1.5 div from 10 MHz to 20 MHz
<sup>3</sup> Denotes warranted specifications, all others are typical. Specifications are valid after a 30-minute warm-up period and ±10° C from firmware calibration temperature	

**Table 10** Display System Characteristics

Name	Typical Value
Display:	5.7-inch (145 mm) diagonal color TFT LCD
Display update rate:	Up to 400 waveforms/s
Resolution:	QVGA 320 x 240 dots
Backlight intensity	300 cd/m <sup>2</sup>
Persistence:	Off, infinite
Display types:	Dots, vectors
Real-time clock:	Time and date (user adjustable)

**Table 11** Measurement Features

Name	Typical Value
Automatic measurements:	Measurements are continuously updated. Cursors track last selected measurement.
Voltage:	Peak-to-peak, maximum, minimum, average, amplitude, top, base, overshoot, preshoot, RMS
Time:	Frequency, period, +width, -width, +duty cycle, -duty cycle, delay rising edge, delay falling edge, phase rising edge, phase falling edge, rise, fall
Display all:	Mode to display all single-channel automatic measurements simultaneously on the display.
Counter:	Built-in 6-digit frequency counter on any channel. Counts up to the oscilloscope's bandwidth.
Cursors:	Manual, track waveform, or automatic measurement selections. Manual and track waveform selections provide readout of Horizontal (X, $\Delta X$ , $1/\Delta X$ ) and Vertical (Y, $\Delta Y$ ).
Waveform math:	One function displayed selected from A+B, A-B, AxB, and FFT. Source selection for A and B can be any combination of oscilloscope channels 1 or 2 (or 3 or 4 on DS01xx4A only).

**Table 12** FFT Measurement Features

Name	Typical Value
Points:	Fixed at 1024 points
Source of FFT:	Oscilloscope channels 1 or 2 (or 3 or 4 on DS01xx4A only)
Window:	Rectangular, blackman, hanning, hamming
Amplitude:	Display in dBVrms and Vrms

**Table 13** Storage

Name	Typical Value
Save/Recall internal:	10 setups and 10 waveforms can be saved and recalled using internal non-volatile memory locations. 1 reference waveform can be saved and recalled using an internal volatile memory location for visual comparisons.
Save/Recall external USB flash drive:	USB 2.0 compliant host ports on front and rear panel compatible with full-speed USB flash drives. <ul style="list-style-type: none"><li>▪ Setups: STP saved and recalled.</li><li>▪ Waveforms: WFM saved and recalled, CSV saved.</li><li>▪ Reference waveforms: REF saved and recalled for visual comparisons.</li><li>▪ Images: 8-bit BMP, 24-bit BMP, PNG saved.</li></ul>
USB flash drive compatibility	Most FAT formatted <2 GB or FAT32 formatted <32 GB flash drives.

**Table 14** I/O

Name	Typical Value
Standard ports:	1 USB device, two USB host ports
Max transfer rate:	USB 2.0 full-speed up to 12 Mb/sec
Printer compatibility:	PictBridge compatible printer



**Table 15** General Characteristics

Name	Typical Value
Physical size:	32.46 cm wide x 15.78 cm high x 12.92 cm deep
Weight, net:	DS01xx2A: 2.93 kg (6.46 lbs) DS01xx4A: 3.03 kg (6.68 lbs)
Weight, shipping:	DS01xx2A: approximately 4.75 kg (10.47 lbs) DS01xx4A: approximately 4.87 kg (10.74 lbs)
Probe comp output:	Frequency ~1 kHz, Amplitude ~3 V
Kensington lock:	Connection on rear panel for security
Security loop	Thread a security cable through the built-in security loop on the rear panel.

**Table 16** Power Requirements

Name	Typical Value
Line rating:	~Line 60 W max 100-120 V/50/60/400 Hz, ±10% 100-240 V/50/60 Hz, ±10%

**Table 17** Environmental Characteristics

Name	Typical Value
Ambient temperature:	Operating 0 °C to +40 °C Non-operating –20 °C to +60 °C
Humidity:	Operating 90% RH (non-condensing) at +40 °C for 24 hr Non-operating 60% RH (non-condensing) at +60 °C for 24 hr
Altitude:	Operating to 4,400 m (15,000 ft) Non-operating to 15,000 m (49,213 ft)
Vibration:	Keysight class GP and MIL-PRF-28800F; Class 3 random
Shock:	Keysight class GP and MIL-PRF-28800F; (operating 30 g, 1/2 sine, 11-ms duration, 3 shocks/axis along major axis. Total of 18 shocks)
Pollution degree 2:	Normally only dry non-conductive pollution occurs. Occasionally a temporary conductivity caused by condensation must be expected.
Indoor use:	Rated for indoor use only.

**Table 18** Other

Name	Typical Value
Measurement categories:	Not rated for CAT II, III, IV

**WARNING**

**Use this instrument only for measurements within its specified measurement category (not rated for CAT II, III, IV). No transient overvoltages allowed.**

The N2739A rack mount kit is available for placing a 1000A Series oscilloscope into Electronic Industries Association (EIA) standard 19-inch (487-mm) rack cabinets. Installation instructions are included in the kit.

# A Safety Notices

Warnings / 147

Safety Symbols / 148

This apparatus has been designed and tested in accordance with IEC Publication 1010, Safety Requirements for Measuring Apparatus, and has been supplied in a safe condition. This is a Safety Class I instrument (provided with terminal for protective earthing). Before applying power, verify that the correct safety precautions are taken (see the following warnings). In addition, note the external markings on the instrument that are described under "Safety Symbols."

## Warnings

- Before turning on the instrument, you must connect the protective earth terminal of the instrument to the protective conductor of the (mains) power cord. The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. You must not negate the protective action by using an extension cord (power cable) without a protective conductor (grounding). Grounding one conductor of a two-conductor outlet is not sufficient protection.
- Only fuses with the required rated current, voltage, and specified type (normal blow, time delay, etc.) should be used. Do not use repaired fuses or short-circuited fuse holders. To do so could cause a shock or fire hazard.
- If you energize this instrument by an auto transformer (for voltage reduction or mains isolation), the common terminal must be connected to the earth terminal of the power source.
- Whenever it is likely that the ground protection is impaired, you must make the instrument inoperative and secure it against any unintended operation.

- Service instructions are for trained service personnel. To avoid dangerous electric shock, do not perform any service unless qualified to do so. Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.
- Do not install substitute parts or perform any unauthorized modification to the instrument.
- Capacitors inside the instrument may retain a charge even if the instrument is disconnected from its source of supply.
- Do not operate the instrument in the presence of flammable gasses or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.
- Do not use the instrument in a manner not specified by the manufacturer.

## Safety Symbols



Instruction manual symbol: the product is marked with this symbol when it is necessary for you to refer to the instruction manual in order to protect against damage to the product.



Hazardous voltage symbol.



Earth terminal symbol: Used to indicate a circuit common connected to grounded chassis.

# Index

## Numerics

50% trigger level, 78

## A

AC channel coupling, 43  
AC coupling, 51  
AC trigger coupling, 82, 88  
accuracy, measurement, 70  
acquisition mode, 69  
actual sample rate, 68  
add math function, 50  
add waveforms, 50  
aliasing, 53, 62, 72  
alternate trigger, 80, 85  
Alternate trigger mode, 104  
ampere units, 49  
amplitude/div setting, 42  
at a glance, 3  
attenuation, probe, 46  
Auto cursor measurements, 105  
auto-detect, USB device port  
setting, 132  
automatic calibration, 132  
automatic measurements, 94  
automatic measurements, clear, 95  
automatic measurements, cursors  
for, 107  
automatic measurements, display or  
hide, 94, 95  
automatic time measurements, 99  
automatic voltage measurements, 96  
Auto-Scale key, 22  
Average acquisition mode, 51, 69, 71

## B

backlight, LCD, 131  
band pass filter, 47  
band reject filter, 47  
bandwidth limit, 44

bandwidth required, oscilloscope, 66  
bandwidth, oscilloscope, 63  
beeper sound, 124  
Blackman FFT window, 52  
brick-wall frequency response, 63  
brightness, grid, 59  
built-in help, 3, 31

## C

calibration, 132  
calibration temperature, 138  
center of screen reference, 42, 131  
channel coupling, 36, 43  
channel pairs, 68  
channel units, 49  
characteristics, 139  
clear automatic measurements, 95  
clear the display, 56  
coarse adjustment, 47  
color printing, 121  
colors (screen), invert, 59  
comma-separated value files, 113  
compensate probes, 24  
computer host, USB device port  
setting, 132  
coordinates, grid, 58  
counter, frequency, 3  
counter, hardware frequency, 104  
coupling, trigger, 87  
cross-hair cursors, 106  
CSV format files, save data to, 113  
cursor measurements, 3, 40, 105  
cursors for automatic  
measurements, 107  
Cursors key, 105

## D

dBVrms scale, 52  
DC channel coupling, 43  
DC trigger coupling, 88

DC voltage of a level signal, 78  
decimated samples, 68, 71  
default scale, reference waveform, 55  
Default Setup key, 20  
Delay Between Falling Edges  
measurement, 102  
Delay Between Rising Edges  
measurement, 102  
delay/phase measurements, selecting  
channels, 95  
delayed sweep time base, 37  
digital filter, 3, 46, 47  
disk information, displaying, 118  
Disk Manager, 114  
display all automatic  
measurements, 95  
display, clear, 56  
distortion, 51  
dots waveform type, 56  
dynamic range, 52

## E

edge speeds, 66  
edge trigger, 80  
English language, 125  
environmental conditions, 136  
Expand Reference preference  
setting, 42  
EXT/5, 91  
external trigger input, 91

## F

factory default, 20  
Fall Time measurement, 100  
FFT (Fast Fourier Transform) math  
function, 50, 51  
FFT resolution, 53  
FFT windows, 51  
field synchronization, 84, 86  
file names, editing, 116

files, deleting, 117  
 files, loading, 117  
 files, renaming, 118  
 filter, digital, 46  
 fine scale adjustment, 42, 47  
 folder names, editing, 116  
 folders, creating new, 115  
 folders, deleting, 117  
 folders, renaming, 117  
 folding frequency, 62  
 force a trigger, 78  
 French language, 125  
 frequency counter, hardware, 3, 104  
 frequency domain, 51  
 Frequency measurement, 100  
 frequency scale, 52  
 frequency, Nyquist, 62  
 front panel control, 25  
 functions, math, 50

## G

gate time, frequency counter, 104  
 Gaussian frequency response, 64  
 German language, 125  
 GND channel coupling, 43  
 graded waveform intensity, 58  
 grayscale printing, 121  
 grid brightness, 59  
 grid, changing, 58  
 ground reference, 42  
 ground reference level for vertical scaling, 131  
 ground reference symbol, 42

## H

Hanning FFT window, 52  
 hardware frequency counter, 3, 99, 104  
 harmonic content, 51  
 Help key, 31  
 hide all automatic measurements, 95  
 high pass filter, 46  
 high-frequency reject coupling, trigger, 88  
 holdoff, trigger, 90  
 horizontal controls, 34  
 horizontal failure margin (mask), 129

horizontal position knob, 34, 36, 40  
 horizontal scale, 35, 73  
 horizontal scale controls indicators, 35  
 horizontal scale knob, 34, 36  
 horizontal time base, 38  
 horizontal time/div, 71

## I

infinite persistence, 57  
 input voltage, 21  
 input voltages, maximum, 137  
 installed module information, 124  
 intensity, waveform, 57  
 internal memory locations, 109  
 internal storage, 3  
 invert a waveform, 47  
 invert screen colors, 59  
 Italian language, 125

## J

Japanese language, 125

## K

Korean language, 125

## L

language, setting the, 125  
 LCD backlight, 131  
 LCD display, 3  
 LF reject trigger coupling, 88  
 line synchronization, 83  
 loading data, 110  
 Local function of [FORCE] key, 79  
 log scale, 52  
 low frequency probe compensation, 24  
 low pass filter, 46

## M

Manual cursor measurements, 105  
 manually adjustable cursors, 105  
 mask test, 40, 126  
 mask, creating, 129  
 mask, loading, 130  
 mask, saving, 130

masks, exporting/importing, 130  
 masks, setting up, 128  
 math function waveforms, 3, 40, 50  
 math scale setting, 50  
 maximum sample rate, 68  
 measurement accuracy, 70  
 measurement category, 137  
 measurements, cursor, 105  
 memory, 3  
 memory depth and sample rate, 68  
 menu display time, 58  
 Menu On/Off button, 20, 22, 28  
 Menu/Zoom key, 34, 37  
 menus, 27, 125  
 model number, 124  
 module information, 124  
 multiply math function, 50  
 multiply waveforms, 50

## N

N2841A passive probe, 18  
 N2842A passive probe, 18  
 Negative Duty Cycle measurement, 101  
 Negative Pulse Width measurement, 101  
 noise in DC power supplies, characterizing, 51  
 non-synchronized signals, 85  
 nonvolatile memory locations, 109  
 Normal acquisition mode, 69  
 normal adjustment, 42  
 NTSC standard, 82, 83  
 Nyquist frequency, 53  
 Nyquist sampling theory, 62

## O

oscilloscope band width, 63  
 oscilloscope band width required, 66  
 oscilloscope display, 29  
 oscilloscope rise time, 65  
 oscilloscope sample rate, 65  
 oscilloscope setups, saving and loading, 111  
 overshoot measurement, 98  
 overvoltage category, 136

**P**

package contents, 18  
 PAL standard, 82, 83  
 parallel cursors, 105  
 passive probes, 18  
 pattern trigger, 80, 84  
 Peak Detect acquisition mode, 71  
 Period measurement, 99  
 persistence, screen, 60  
 persistence, waveform, 57  
 Phase Between Falling Edges measurement, 103  
 Phase Between Rising Edges measurement, 103  
 phase/delay measurements, selecting channels, 95  
 PictBridge compliant printer, 119, 120  
 PictBridge printer host, USB device port setting, 132  
 play-back waveforms, 74, 75  
 pollution degree, 136  
 Portuguese language, 125  
 Positive Duty Cycle measurement, 101  
 Positive Pulse Width measurement, 101  
 potentiometer adjustment, 36  
 power cord, 19  
 power source, 19  
 power supply testing, 36  
 power switch, 19  
 preferences, setting, 131  
 preshoot measurement, 98  
 printing data, 119  
 probe attenuation, 46  
 Probe Comp signal, 21  
 programming, remote, 120  
 pulse width trigger, 80, 81

**Q**

quick help, 125

**R**

random noise, 70  
 real-time sampling mode, 67  
 recalling data, 110  
 record waveforms, 74

recorded waveforms, storing, 76  
 recording waveforms, 74  
 Rectangle FFT window, 52  
 reference, 42  
 reference level for vertical scaling, 131  
 reference waveform, saving, 54  
 reference waveforms, 40, 54  
 reference waveforms, export or import, 54  
 refresh rate, 3, 71  
 remote program, 79  
 remote programming, 120  
 required oscilloscope band width, 66  
 Rise Time measurement, 100  
 rise time, oscilloscope, 65  
 rise time, signal, 66  
 Rmt on oscilloscope display, 79  
 Roll time base, 38  
 Run Control keys, 30  
 Run/Stop key, 30  
 Russian language, 125

**S**

safety  
   notices, 147  
   symbols, 148  
 sample rate, 3, 40  
 sample rate and memory depth, 68  
 sample rate, oscilloscope, 63, 65  
 sampling rate, 38  
 sampling theory, 62  
 sampling, overview, 62  
 save data to CSV format files, 113  
 save screens to BMP or PNG files, 112  
 Save/Recall key, 110  
 saving data, 110  
 screen colors, invert, 59  
 screen persistence, 60  
 screen refresh rate, 71  
 screen saver, 131  
 screens, saving to BMP or PNG files, 112  
 SECAM standard, 82, 83  
 self-calibration, 132  
 sensitivity, trigger, 89  
 sensitivity, Volts/Div control, 47  
 serial number, 124  
 setups, saving and loading, 111

shipping container, 18  
 Simplified Chinese language, 125  
 sine(x)/x interpolation, 36, 73  
 Single key, 30  
 Slow Scan mode, 36  
 softkeys, 27  
 software version, 124  
 sound, turning on/off, 124  
 Spanish language, 125  
 specifications, 138  
 square waves, 64  
 status bar, 35  
 store recorded waveforms, 76  
 subtract math function, 50  
 subtract waveforms, 50  
 sweep speed, 35  
 symbols, safety, 148  
 system information, displaying, 124

**T**

temperature at last calibration, 138  
 theory, sampling, 62  
 time measurements, 3, 40, 99, 105  
 Track cursor measurements, 105  
 tracking cross-hair cursors, 106  
 Traditional Chinese language, 125  
 transducer monitoring, 36  
 trigger controls, 40  
 trigger coupling, 87  
 trigger high-frequency reject coupling, 88  
 trigger holdoff, 90  
 trigger holdoff, reset, 90  
 trigger level, 78, 104  
 trigger mode, 80  
 trigger position, 35  
 trigger sensitivity, 89  
 trigger sweep, 85, 87  
 trigger system controls, 78  
 triggering, 3

**U**

under-sampled signals, 62  
 units, channel, 49  
 unknown units, 49  
 untriggered sample acquisition mode, 38

USB device port, 119  
 USB Device port function, 131  
 USB ports, 3  
 Utility key, 123

## V

Vamp (amplitude voltage = Vtop - Vbase) measurement, 97  
 Vavg (average voltage) measurement, 97  
 Vbase (base voltage) measurement, 97  
 vectors, 40  
 vectors waveform type, 56  
 vernier adjustment, 42, 47  
 vertical failure margin (mask), 129  
 vertical position, 42  
 vertical position knob, 41, 42  
 vertical scale, 41  
 vertical scale knob, 41, 42, 47  
 vertical scale reference level, 131  
 vertical scaling, 46  
 vibration, analyzing, 51  
 video trigger, 80, 82  
 Vmax (maximum voltage) measurement, 96  
 Vmin (minimum voltage) measurement, 97  
 volt units, 49  
 voltage measurements, 3, 40, 96, 105  
 Volts/Div control sensitivity, 47  
 Vpp (peak-to-peak voltage) measurement, 97  
 Vrms (root-mean-square voltage) measurement, 97  
 Vtop (top voltage) measurement, 97

## W

warnings, 147  
 watt units, 49  
 waveform intensity, 57  
 waveform intensity, graded, 58  
 waveform math, 50  
 waveform persistence, 57  
 waveforms, recording/playing-back, 3, 74  
 waveforms, turning on or off, 41  
 window, FFT, 51

## X

X-Y format, 38  
 X-Y time base, 38

## Y

Y-T time base, 38

## Z

zoomed time base, 37  
 zoomed time base display, 40





This information is subject to change  
without notice.

© Keysight Technologies, Inc.  
2008-2009, 2017

Printed in Malaysia  
Third Edition, August 2017



54130-97016  
[www.keysight.com](http://www.keysight.com)

